



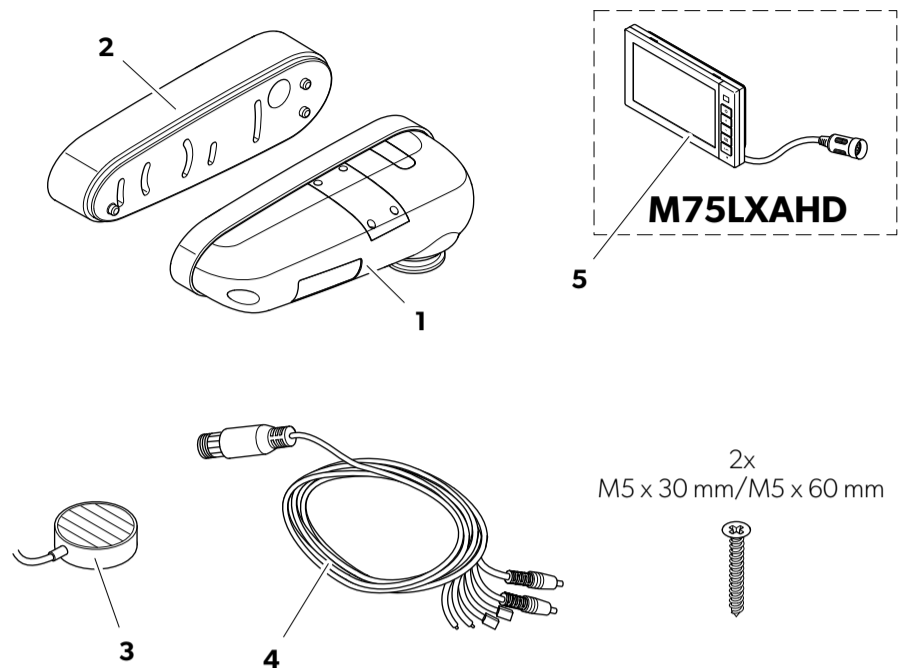


1

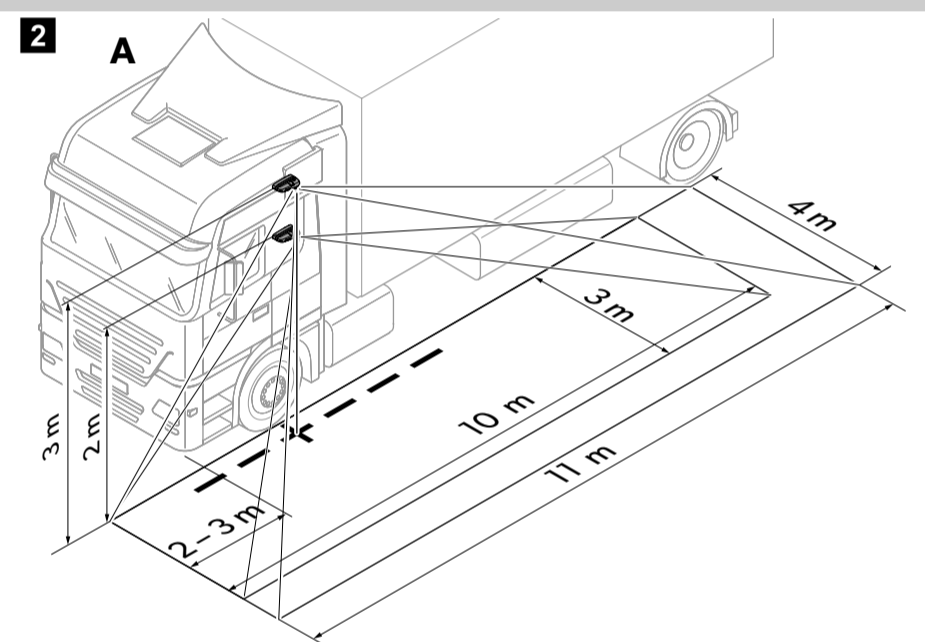


2




3

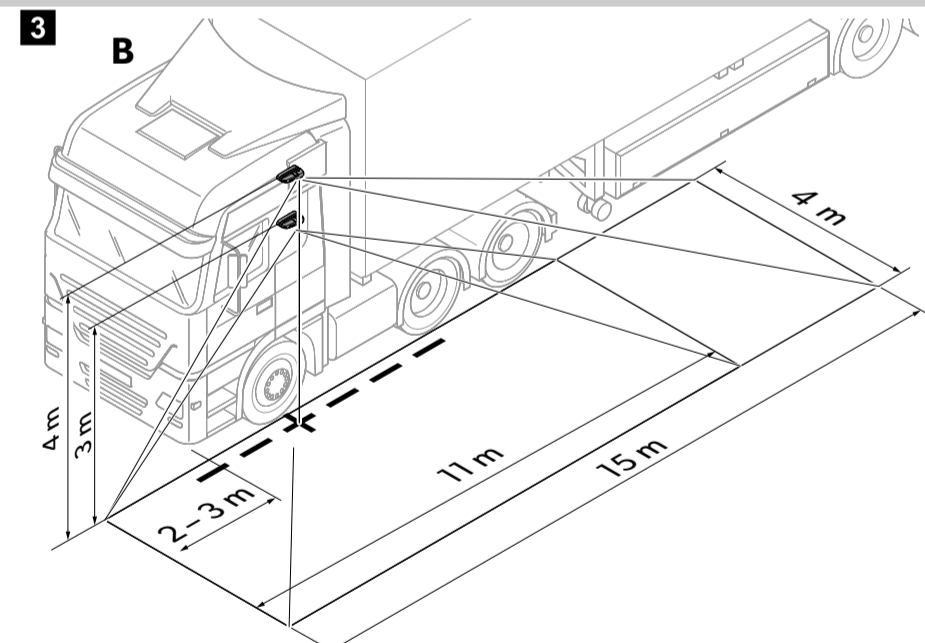


4

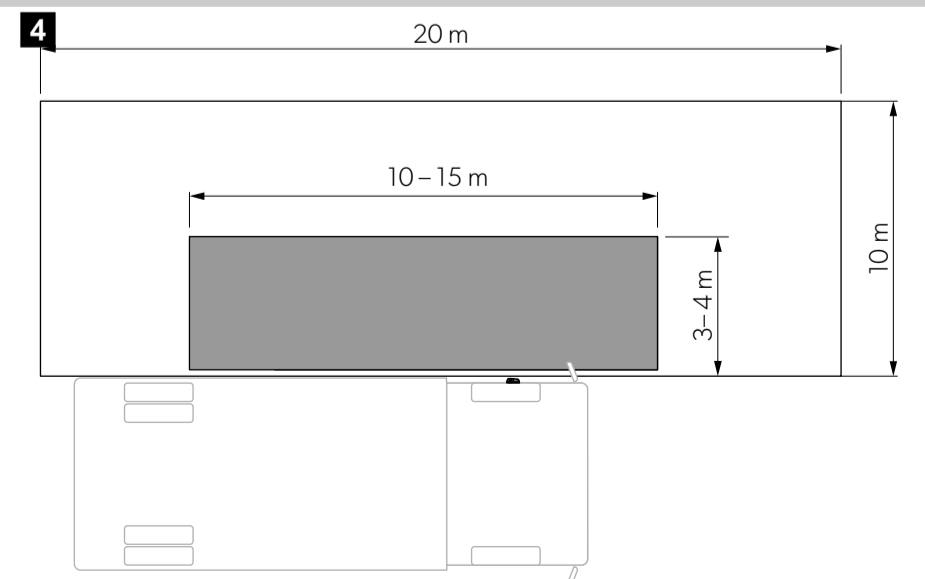


5

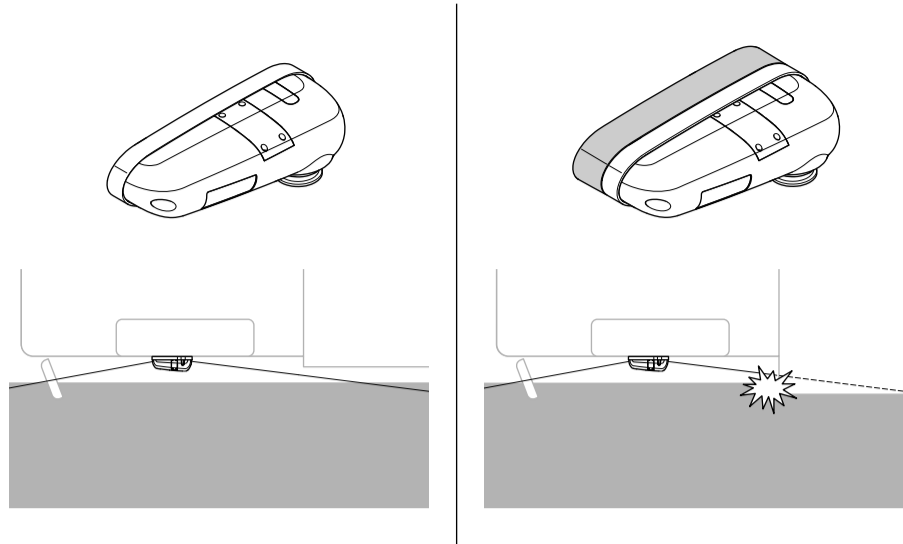


6

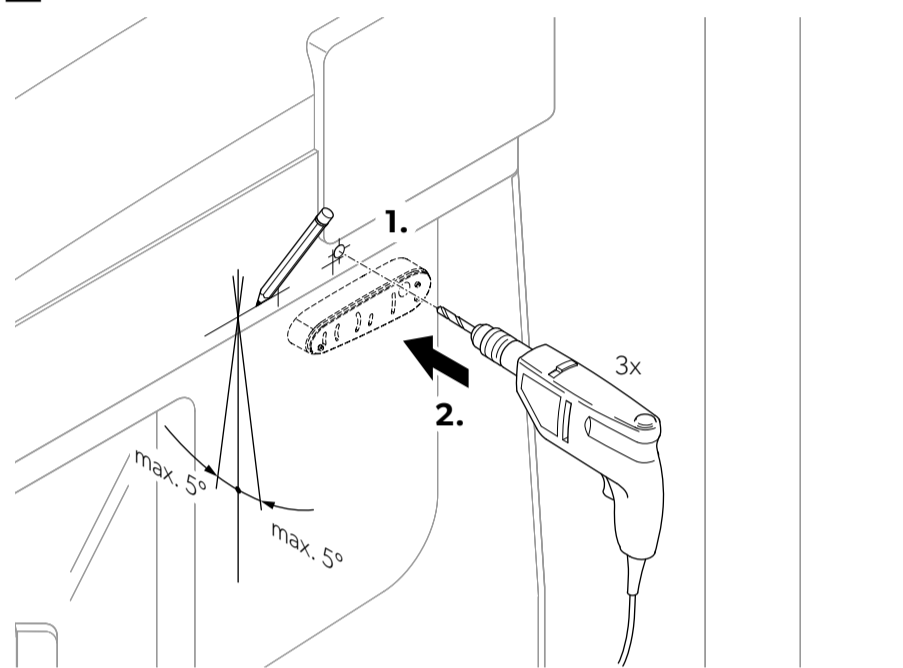

7

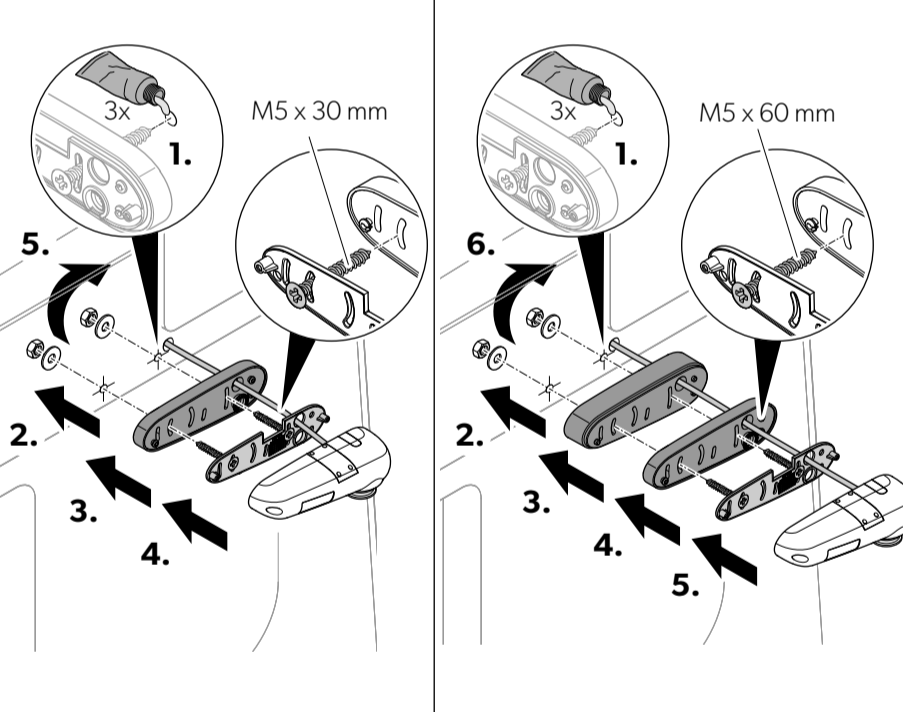


8

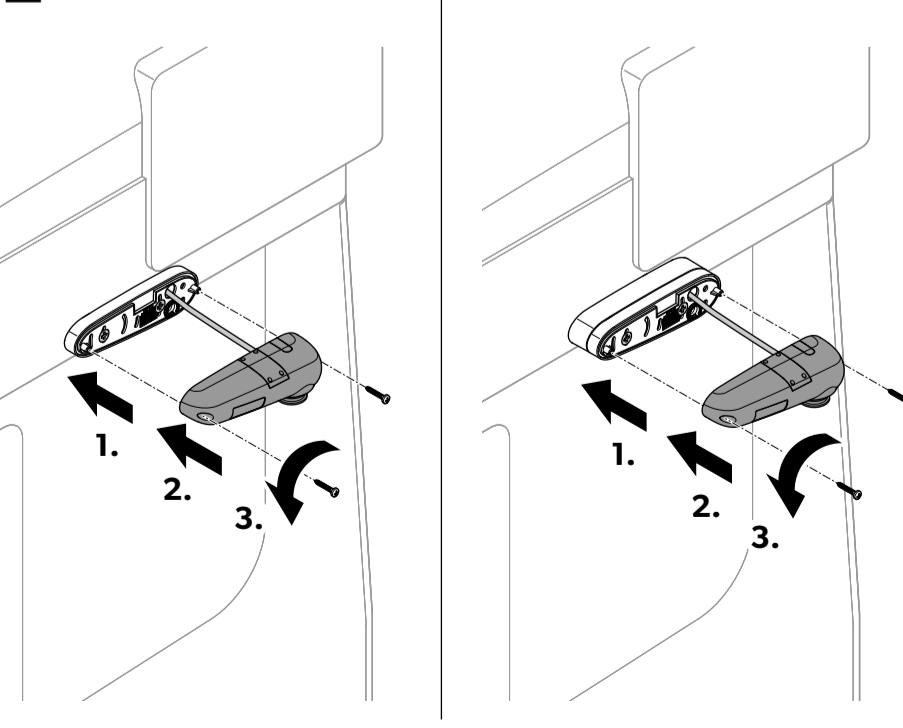




9

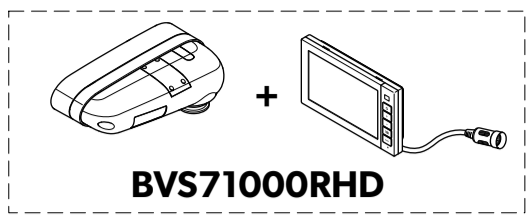


BVS71000RHD

M75LXAHD documents.dometic.com/  
?object\_id=62728

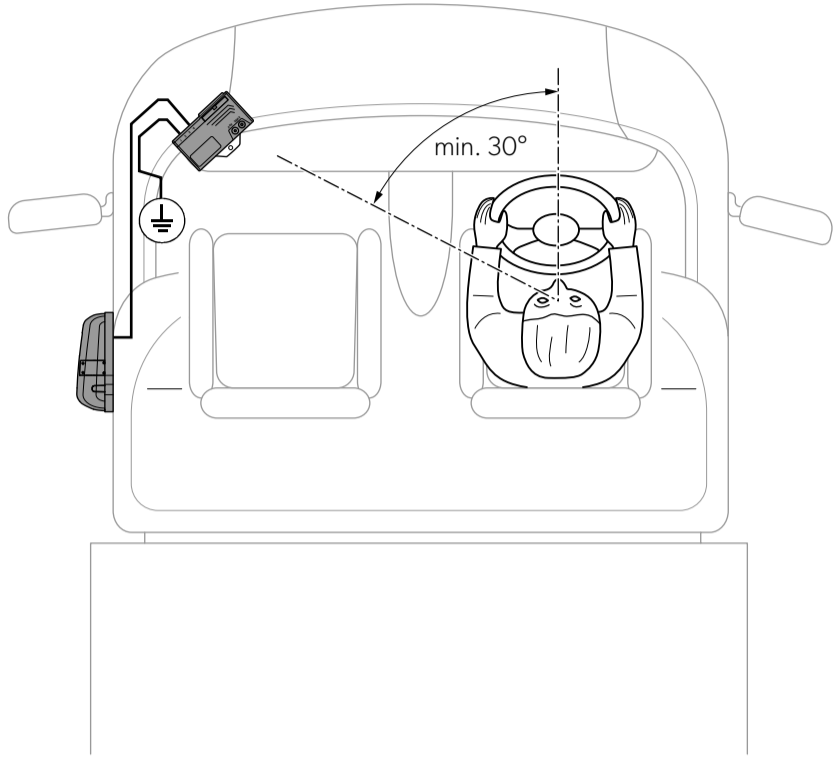

12

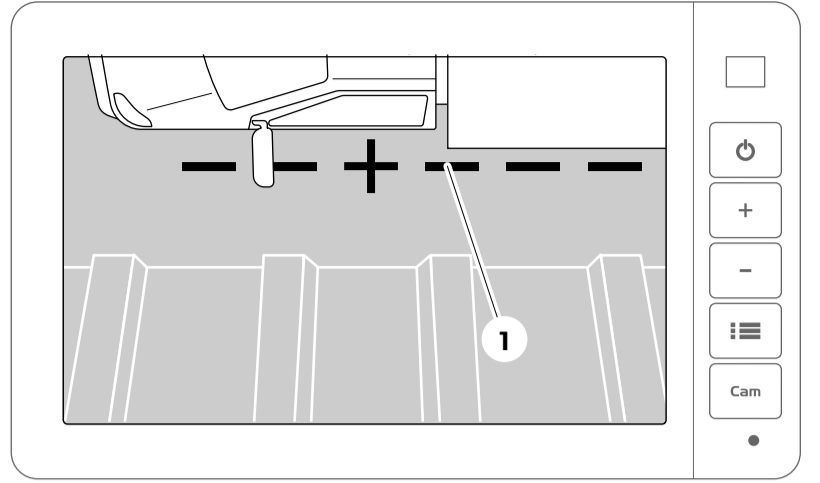


	EN	DE	FR	ES	PT	IT	NL	DA
bk	Black	Schwarz	Noir	Negro	Preto	Nero	Zwart	Sort
bu	Blue	Blau	Bleu	Azul	Azul	Blu	Blauw	Blå
gn	Green	Grün	Vert	Verde	Verde	Verde	Groen	Grøn
gy	Grey	Grau	Gris	Gris	Cinzento	Grigio	Grijs	Grå
rd	Red	Rot	Rouge	Rojo	Vermelho	Rosso	Rood	Rød
wh	White	Wei	Blanc	Blanco	Branco	Bianco	Wit	Hvid
ye	Yellow	Gelb	Jaune	Amarillo	Amarelo	Giallo	Geel	Gul

	SV	NO	FI	RU	PL	SK	CS	HU
bk	Svart	Svart	Musta	Черный	Czarny	ierna	ern	Fekete
bu	Bl	Bl	Sininen	Синий	Niebieski	Modr	Modr	Kk
gn	Grn	Grnn	Vihre	Зеленый	Zielony	Zelen	Zelen	Zld
gy	Gr	Gr	Harmaa	Серый	Szary	Siv	ed	Szrke
rd	Rd	Rd	Punainen	Красный	Czerwony	erven	erven	Piros
wh	Vit	Hvit	Valkoinen	Белый	Biały	Biela	Bil	Fehr
ye	Gul	Gul	Keltainen	Желтый	lty	lt	lut	Srga



10

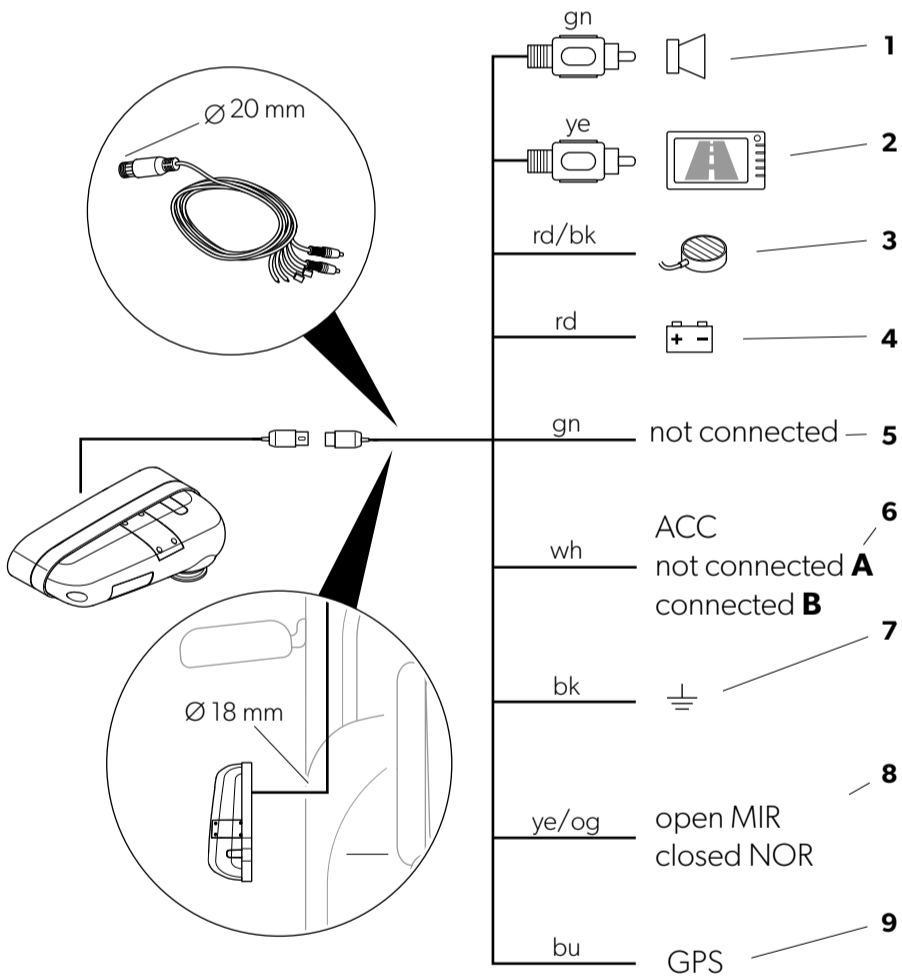

11

