

MARINE AIR CONDITIONING

GUIDELINES FOR SELECTING
AIR CONDITIONING FOR YOUR BOAT




MOBILE LIVING MADE EASY.

Dear Freedom Lover,

There are millions of people around the world who use Dometic products. You all have one thing in common – you're going somewhere. No matter the vessel, our job is to meet your essential needs on the journey. Like cooking, keeping food fresh, taking care of personal hygiene, and maintaining a pleasant temperature. That way, you can explore more, see more and stay away longer. We call it mobile living made easy.

We invite you to go on a journey of discovery. Explore the Dometic world and let us know what we can do for you.

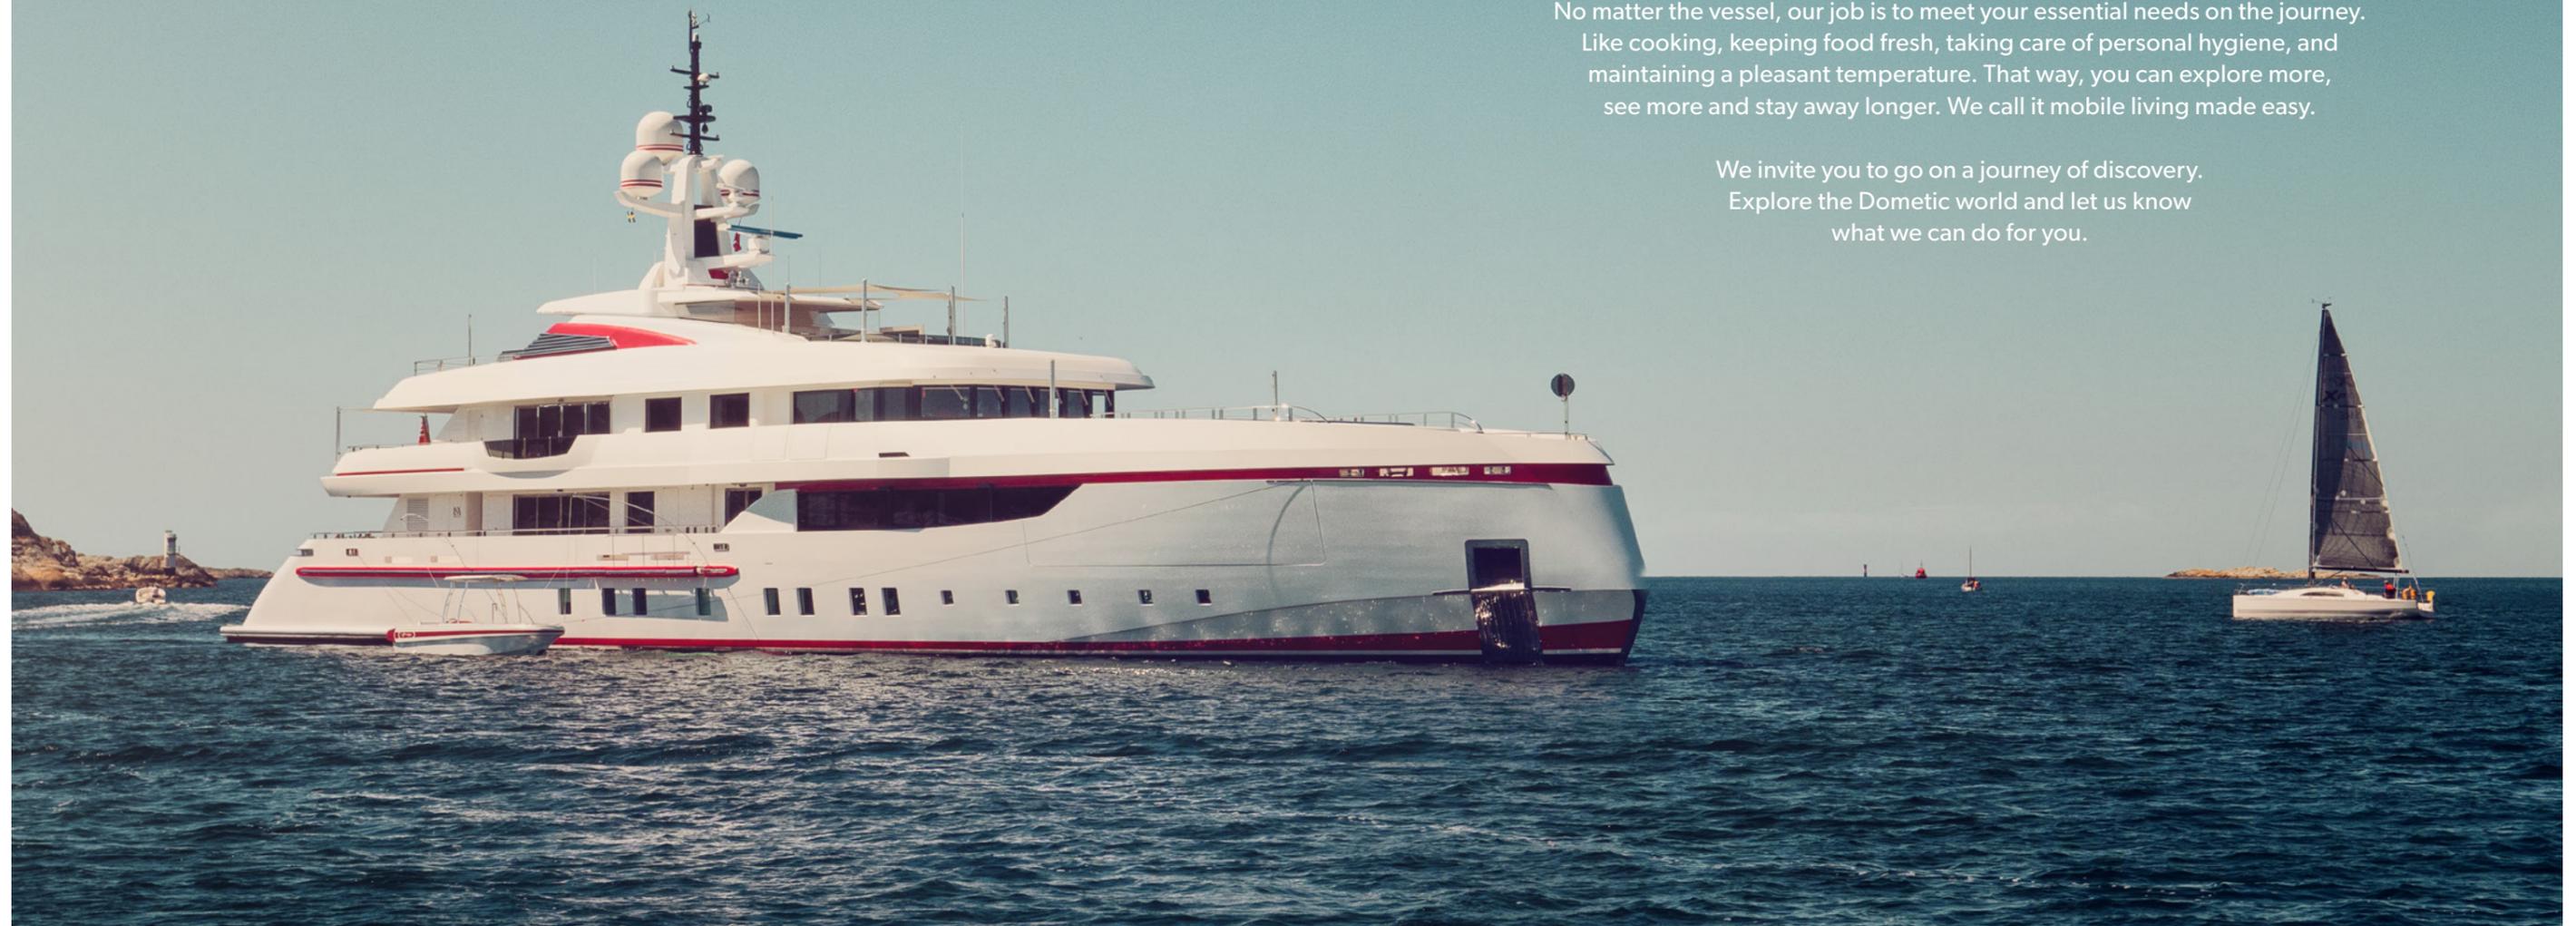




UNDERSTANDING AIR CONDITIONING

The basic principle of any air conditioner is the transfer of heat from one element to another. In a direct expansion (DX) seawater-cooled air conditioner, heat is transferred from the cabin air to the refrigerant gas to the seawater. In heating mode, the refrigerant flow is reversed and heat is transferred from the seawater to the refrigerant gas to the cabin air.

In addition to lowering the air temperature, moisture is also removed. Reduced humidity feels more comfortable and helps keep the boat dry, reducing mold growth and other moisture-related problems.

THE THREE TYPES OF MARINE AIR CONDITIONING SYSTEMS

Figure 1: Self-Contained Air Conditioning

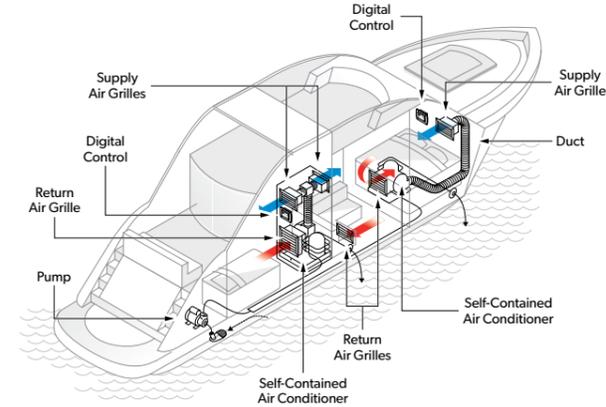


Self-Contained DX Systems (see Figure 1)

All major components mounted on a single chassis installed in the living area; usually under a bunk or settee or in a locker.

A single unit can cool one cabin or it can be ducted to two or more cabins to save space and cost.

Best choice for boats up to 40 ft (12 m) due to lower cost of units and installation.

Figure 2: Split-Gas Air Conditioning

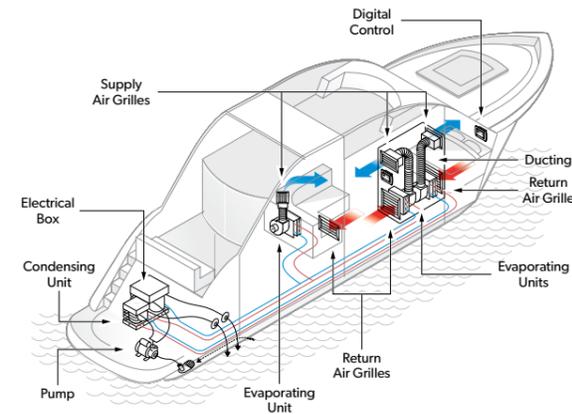

Split-Gas DX Systems (see Figure 2)


Major components are split between two units that are installed in different locations and connected by insulated, copper refrigerant tubing.

1. Condensing unit (compressor, seawater condenser, and electrical components) mounts in engine room or other mechanical space.
2. Evaporator unit installs in living area. Two air handlers can connect to one condensing unit to cool multiple cabins or a single large area.

Air handlers require less space in living area, and the system is quieter because the compressor is in engine room.

For boats up to 80 ft (24 m). The maximum length of refrigerant tubing between the condenser and air handlers is 50 ft (15 m), and the system must be charged with refrigerant by a certified technician.

Figure 3: Chilled Water Air Conditioning

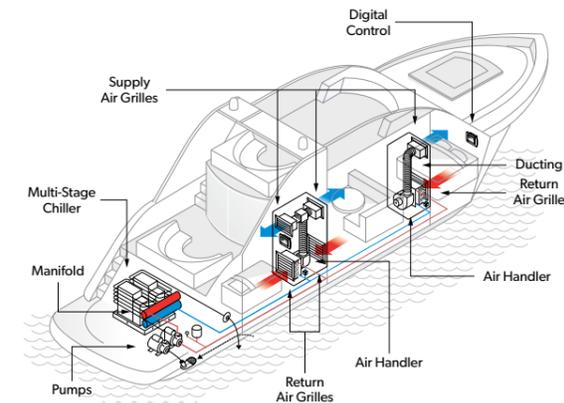

Chilled Water Systems (see Figure 3)

Chiller unit in engine room cools (or heats) fresh water that is pumped through an insulated piping loop to air handlers located in the living spaces that cool (or heat) the air.

Chillers offer flexible load management and a reduced peak electrical load.

For boats over 80 ft (24 m). No limitation on the number of

FACTORS THAT DETERMINE THE TYPE OF SYSTEM YOU NEED

- 1** Size and layout of boat for calculating required system capacity
- 2** Access for routing tubes/wires/hoses
- 3** Location of furnishings
- 4** Storage space to sacrifice
- 5** Cost

HOW TO SIZE YOUR SYSTEM

Step 1.

Find the required capacity by dividing the vessel into three main load areas:

Below deck: Cabins where the hull slopes inward toward the keel with minimal port lights and hatches.

Mid-deck: Areas on main deck with small or shaded windows.

Above deck: Areas with large glass surfaces and direct sunlight. Calculate the area of each space to be air-conditioned.

Multiply the length and width of each cabin to be treated to determine the area in square feet or square meters. It is assumed the boat has average headroom of about 6.5 ft (2 m) with an average amount of furniture. If one end of the cabin is narrower than the other, take your measurement in the middle.

Using Table 1, multiply the area of each cabin by the appropriate load factor to find the required air conditioner capacity. For example, if your boat is in a temperate climate and you are measuring in square feet, you would multiply your total below-deck area by 60, your mid-deck area by 90, and your above-deck area by 120.

Figure 1.

| Climate | Below Deck | Mid Deck | Above Deck |
|--|------------|----------|------------|
| Load factor, BTU/h per ft² | | | |
| Temperate ¹ | 60 | 90 | 120 |
| Tropical ² | 90 | 120 | 150 |
| Arabic Gulf ³ | 120 | 150 | 180 |
| Load factor, BTU/h per m² | | | |
| Temperate ¹ | 646 | 969 | 1,292 |
| Tropical ² | 969 | 1,292 | 1,615 |
| Arabic Gulf ³ | 1,292 | 1,615 | 1,938 |

1. 95°F (35°C) air, 95°F (35°C) seawater, moderate humidity.
 2. 105°F (41°C) air, 95°F (35°C) seawater, high humidity.
 3. 122°F (50°C) air, 104°F/40°C seawater, 95% humidity.

Step 2.

Taking into account the boat's size and layout, determine the number of self-contained systems or air handlers needed.

Find out which cabins or areas will benefit best from a dedicated thermostat control and which cabins can be served by ducting or a secondary air handler (where the only temperature control is an adjustable grille or fan-speed control).

Step 3.

Taking into account the boat's size and layout, determine the location of each self-contained system or air handler.

In addition to leaving enough room for plumbing and ducting, there must also be sufficient space in each installation location for servicing and/or removal of the unit.

A self-contained unit or air handler must have an open return-air path. However, the return-air grille does not need to be directly in front of the unit. In fact, the system will be less noisy if there is an indirect path for the return air to follow. Never install the unit in the bilge or engine room or where vapors from these areas could reach the unit.

A self-contained unit or air handler must be located so the discharge ducting can be routed to a high point in the cabin. Rotate the blower to create the most direct path for routing the discharge duct. Poor airflow may result from a ducting run of over 15 ft (4.5 m) or a ducting run with many bends. Plan for the shortest possible ducting run while limiting the number of bends.

Step 4.

Seawater Components. Use one pump of adequate capacity for all air conditioning systems on board. The basic rule is 250 gallons per hour (4 gpm) of water per ton of air conditioning (one ton is 12,000 BTU). If more than one system shares a common pump, you will also need a pump relay and manifold.

The BTU capacity in Table 2 shows recommended seawater flow rates and minimum inlet (through-hull) sizes.

Figure 2

| System Capacity | Seawater Flow Rate | Through-Hull Inlet Size |
|-------------------------|-----------------------|-------------------------|
| 12,000 BTU/h (3,517 W) | 3 gal/min (11 L/min) | 1/2 in (13 mm) |
| 24,000 BTU/h (7,034 W) | 6 gal/min (23 L/min) | 3/4 in (19 mm) |
| 48,000 BTU/h (14,067 W) | 12 gal/min (45 L/min) | 1 in (25 mm) |

Step 5.

Determine the proper duct diameter (Ø) and grille sizes for your air conditioning system. Use Table 3 to find the correct sizes, which are based on the system's BTU capacity.

Figure 3

| System Capacity | Duct Diameter | Supply-Air Grille | Return-Air Grille |
|------------------------|------------------------|--|--|
| 6,000 BTU/h (1,758 W) | 4 in (10.16 cm) | 32 in ² (206 cm ²) | 64 in ² (413 cm ²) |
| 8,000 BTU/h (2,344 W) | 5 in (12.7 cm) | 48 in ² (310 cm ²) | 80 in ² (516 cm ²) |
| 10,000 BTU/h (2,931 W) | 6 in (15.2 cm) | 60 in ² (387 cm ²) | 100 in ² (645 cm ²) |
| 12,000 BTU/h (3,517 W) | 6 in (15.2 cm) | 70 in ² (452 cm ²) | 130 in ² (839 cm ²) |
| 16,000 BTU/h (4,689 W) | 7 in (17.8 cm) | 80 in ² (516 cm ²) | 160 in ² (1,032 cm ²) |
| 18,000 BTU/h (5,275 W) | 7 in (17.8 cm) | 100 in ² (646 cm ²) | 200 in ² (1,291 cm ²) |
| 27,000 BTU/h (7,913 W) | 8 in (20.4 cm) | 140 in ² (904 cm ²) | 240 in ² (1,549 cm ²) |
| 30,000 BTU/h (8,792 W) | 2 × 6 in (2 × 15.2 cm) | 150 in ² (968 cm ²) | 250 in ² (1,613 cm ²) |



OTHER SYSTEM COMPONENTS

A complete air conditioning system requires Controls, a Seawater Cooling system, an Air-Distribution System and Electrical Connections.

Controls

There are two types of controls: digital and mechanical (rotary-knob switch).

Digital. These keypad/displays are part of a microprocessor system with many advanced functions, including automatic fan-speed control, fault display, and a dehumidification program. Decorative bezels can be added to match your interior design.

Mechanical. These manual switches with two or three rotary knobs control the mode of operation, thermostat, and variable fan speed. Reverse-cycle models have automatic changeover between heating and cooling.

Seawater Cooling System


The seawater cooling system brings seawater into and through the system then discharges it overboard. It consists of an inlet through-hull fitting, seacock (water valve), strainer, pump, and overboard discharge fitting, all connected by hose or piping (see Figure 4).

It is important that the seawater plumbing is self-draining, meaning that if the boat is lifted, all the water in the piping will drain out. An air conditioning system plumbed this way will have no air locks that could disrupt the flow of seawater.

If multiple air conditioning units are served by a single seawater pump, a pump relay and water manifold are required. A centrifugal seawater pump is recommended for efficient, quiet operation and long life. Centrifugal pumps are not self-priming and must be mounted below the water-line.

For shallow-draft boats where it is impossible to mount the pump below the water-line, a self-priming pump must be used.

Figure 4

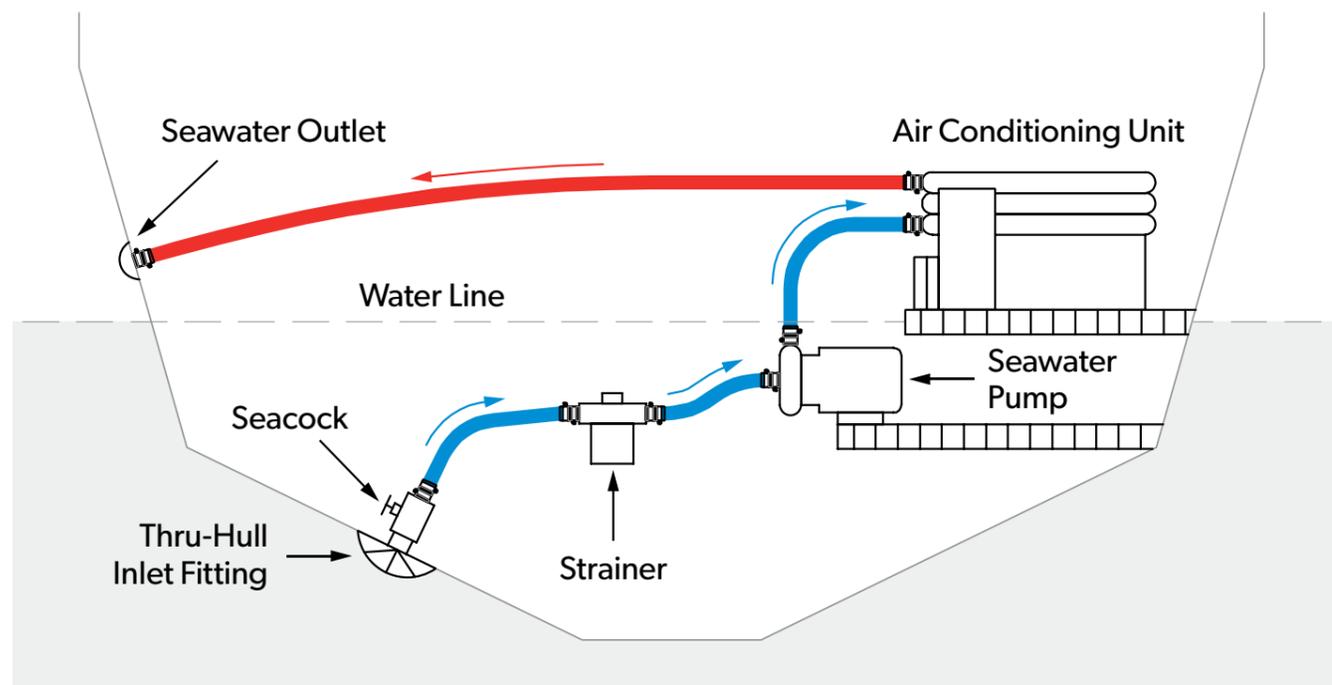


Air-Distribution System

Cabin air is drawn into the self-contained unit or air handler through a return-air grille. It is then cooled (or warmed) and blown back into the cabin through a ducting system.

Figure 5 illustrates an air conditioning unit or air handler in cooling mode installed beneath a bunk. Ducting should be insulated to prevent secondary condensation. An air filter located on the cooling unit or on the return-air grille must be cleaned or replaced regularly.

The supply-air grille should be positioned high in the cabin and away from the return-air grille to ensure good circulation. Plenums (transition boxes) can be installed in the ducting to split the air flow into multiple ducts to serve one or more cabins.

Figure 5

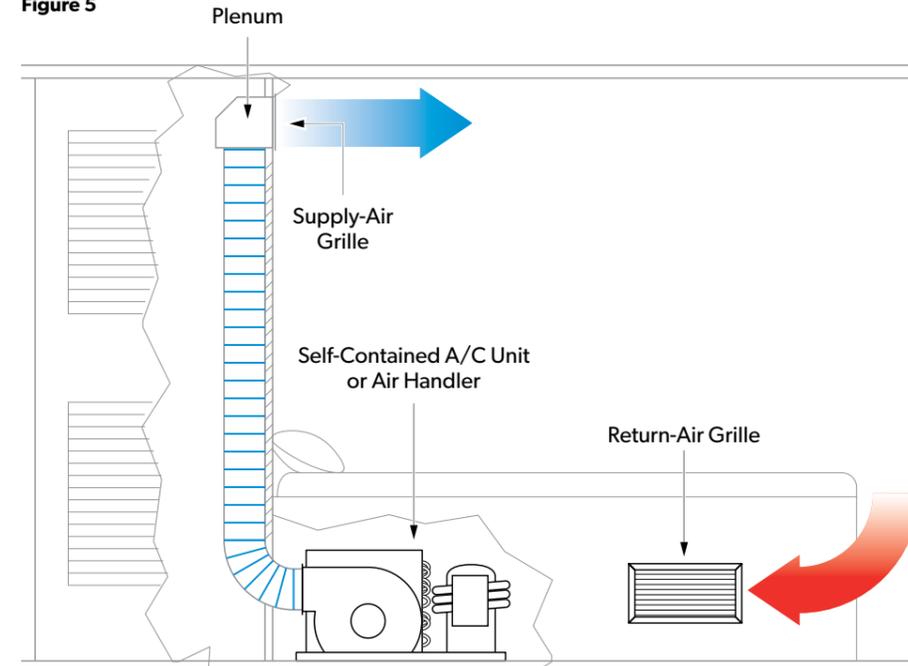

Electrical Connections

Most Dometic air conditioning systems are available in three power configurations: 115V 60Hz, 230V 60Hz, and 220V-240V 50Hz. Larger systems are available with three-phase compressors. Some 60Hz units can run at 50Hz, but not all.

Please check the specification sheet or contact your Dometic dealer if you have a particular power requirement.

Wire sizing should be done per ABYC requirements. Selecting the circuit breaker for the system:


- Multiply the running (heat) amps by 2.5 then choose the next higher-size breaker.
- If the seawater pump is wired with the unit (not on a pump relay), then add in the pump amps before multiplying by 2.5.

Using a Generator

If running on a generator, make sure that it can handle the large starting inrush current of the compressor. Use of a Dometic SmartStart™ is highly recommended to smooth out starter demand and ease strain on the generator.

Take the product specification sheets to your generator supplier and ask for their help.

DOMETIC'S WORLDWIDE SERVICE NETWORK

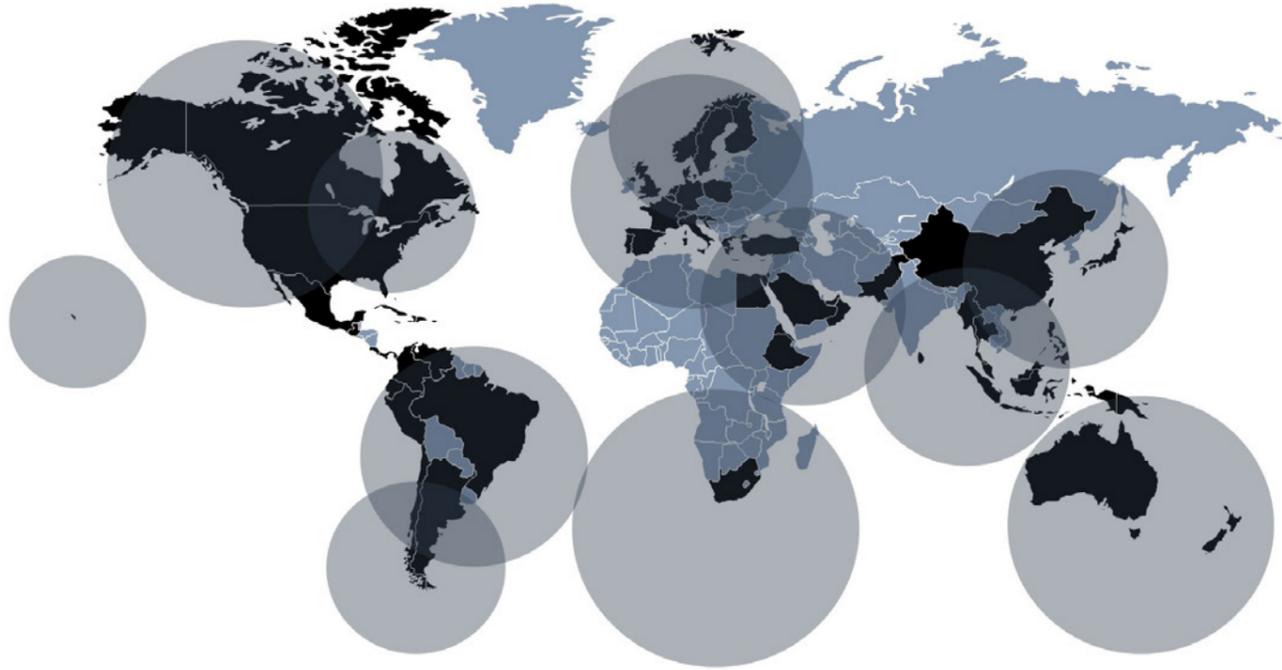

The World's Largest Marine Service Network

Dometic Marine has an extensive global network of dealers and service partners across 100 countries. Whether you are out on a lake or in a larger body of water, Dometic Marine are here to help in the event one of your products becomes faulty.

All Dometic service partners are proficiently trained and equipped with the tools and skills needed to find or fix the perfect onboard solution using existing, newly developed products or a combination of the two. In the event you have a bespoke product, our technical sales engineers will gather your specifications and design a solution that works best for you. The combination allows Dometic to offer hassle-free servicing, installations, and repairs for your Dometic appliances.

Should you require service support, please visit our Service Locator on [Dometic.com](https://www.dometic.com) to find your local service partner. Alternatively, should you have any questions or cannot find what you are looking for, please contact your local Dometic Sales Representative.



AUSTRALIA**Dometic Australia Pty Ltd**

1 John Duncan Court
Varsity Lakes QLD 4227
Tel +61 7 55076000
Fax +61 7 55076001
Mail sales@dometic-waeco.com.au

DENMARK**Dometic Denmark A/S**

Nordensvej 15, Taulov
DK-7000 Fredericia
Tel +45 75585966
Fax +45 75586307
Mail info@dometic.dk

FINLAND**Dometic Finland Oy**

Valimotie 15
FIN-00380 Helsinki
Tel +358 20 7413220
Mail info@dometic.fi

FRANCE**Dometic SAS**

6 Avenue du Poteau
Bâtiment B1
60300 Chamant
Tel +33 3 44633525
Fax +33 3 44633518
Mail info@dometic.fr

GERMANY**Dometic Germany GmbH**

Hollefeldstraße 63
D-48282 Emsdetten
Tel +49 (0) 2572 879-0
Fax +49 (0) 2572 879-300
Mail info@dometic-waeco.de

HONG KONG**Dometic Group Asia Pacific**

Suites 2207-11, 22/F, Tower 1
The Gateway, 25 Canton Road
Tsim Sha Tsui, Kowloon
Tel +852 2 4611386
Fax +852 2 4665553
Mail info@waeco.com.hk

ITALY**Dometic Italy S.R.L.**

Via Virgilio, 3
I-47122 Forlì (FC)
Tel +39 0543 754901
Fax +39 0543 754983
Mail vendite@dometic.it

ITALY**Dometic Italy Marine S.R.L.**

Via Vesuvio, 18
20834 Nova Milanese (MB)
Tel +39 0362 44 182
Fax +39 0362 45 2226
Mail condaria@dometic.it

JAPAN**Dometic KK**

Maekawa-Shibaura, Bldg. 2
2-13-9 Shibaura Minato-ku
Tokyo 108-0023
Tel +81 3 5445 3333
Fax +81 3 5445 3339
Mail info@dometic.jp

NETHERLANDS**Dometic Benelux B.V.**

Innovatiepark 12,
4906 AA Oosterhout
Tel +31 76 5029000
Fax +31 76 5029019
Mail info@dometic.nl

NEW ZEALAND**Dometic New Zealand Ltd.**

PO Box 12011
Penrose
Auckland 1642
Tel +64 9 622 1490
Fax +64 9 622 1573
Mail customerservices@dometic.co.nz

NORWAY**Dometic Norway AS**

Elveveien 30B
N - 3262 Larvik
Tel +47 33428450
Fax +47 33428459
Mail info@dometic.no

POLAND**Dometic Poland SP. Z.O.O**

ul. Puławska 435A
PL-02-801 Warszawa
Tel +48 22 414 3200
Fax +48 22 414 3201
Mail info@dometic.pl

PORTUGAL**Dometic Spain, S.L.**

Branch Office em Portugal
Rot. de São Gonçalo nº 1 - Esc. 12
2775-399 Carcavelos
Tel +351 219 244 173
Fax +351 219 243 206
Mail info@dometic.pt

SINGAPORE**Dometic Pte Ltd**

18 Boon Lay Way
06-141 Trade Hub 21
Singapore 609966
Tel +65 6795 3177
Fax +65 6862 6620
Mail dometic@dometic.com.sg

SOUTH AFRICA**Dometic (Pty) Ltd**

Regional Office South Africa &
Sub-Saharan Africa
2 Avalon Road, West Lake View
Ext 11, Modderfontein 1645
Tel +27 87 3530380
Mail info@dometic.co.za

SPAIN**Dometic Spain, S.L.**

Avda. Sierra del Guadarrama, 16
E-28691 Villanueva de la Cañada
Madrid
Tel +34 91 833 60 89
Fax +34 900 100 245
Mail info@dometic.es

SWEDEN**Dometic Scandinavia AB**

Gustaf Melins gata 7
SE-421 31 Västra Frölunda
Tel +46 31 7341100
Fax +46 31 7341101
Mail info@dometicgroup.se

UNITED ARAB EMIRATES**Dometic Middle East FZCO**

P.O. Box 17860
S-D 6, Jebel Ali Freezone
Dubai
Tel +971 4 883 3858
Fax +971 4 883 3868
Mail info@dometic.ae

UNITED KINGDOM**Dometic UK Blind Systems Ltd**

Atlantic House, 1-3 Ellis Square
Selsey, West Sussex PO20 0AY
Tel +44 124 360 6909
Fax +44 124 360 8300
Mail blindsystems@dometic.com

UNITED KINGDOM**Dometic UK Ltd**

Dometic House, The Brewery,
Blandford St. Mary
Dorset DT11 9LS
Tel +44 344 626 0133
Fax +44 344 626 0143
Mail marine@dometic.co.uk

USA**Dometic Marine**

2000 N Andrews Avenue
Pompano Beach, FL 33069
Tel +1 954 973 2477
Fax +1 954 979 4414
Mail marinesales@dometic.com

USA**Dometic Marine**

1 Sierra Place
Litchfield, IL 62056
Tel +1 877 663 8396
Fax +1 217 324 4396

We distribute our products in around 100 markets. Please ask for your contact point if not listed here, or check our website Dometic.com