




TRIM LINE

RV SCREEN ROOM

USA
SERVICE OFFICE
Dometic Corporation
1120 North Main Street
Elkhart, IN 46514

CANADA
Dometic Corporation
866 Lings Dr.
Cambridge, Ontario
CANADA N3H 2N7

**SERVICE CENTER &
DEALER LOCATIONS**
Please Visit:
www.eDometic.com

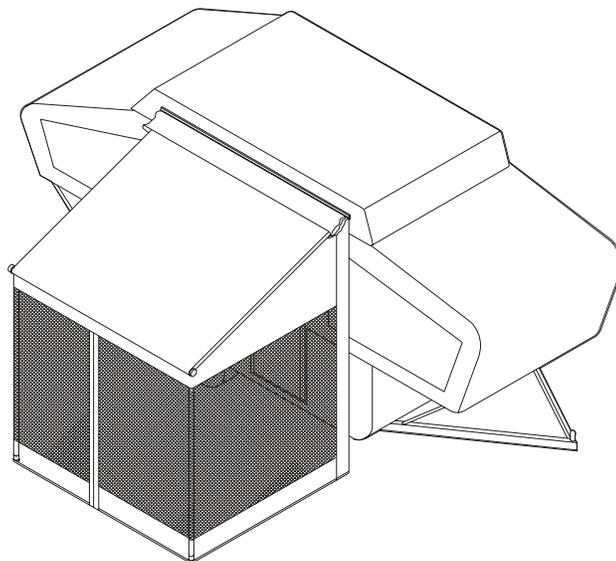

INSTALLATION INSTRUCTIONS

**TRIM LINE
SCREEN ROOM
9472XX.X07
9472XX.X09**

REVISION A
Form No. 3107887.030 09/16
©2016 Dometic Corporation
LaGrange, IN 46761

SAFETY INSTRUCTIONS

This manual has safety information and instructions to help users eliminate or reduce the risk of accidents and injuries.

RECOGNIZE SAFETY INFORMATION



This is the safety-alert symbol. When you see this symbol in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating instructions.

UNDERSTAND SIGNAL WORDS

A signal word, **WARNING** OR **CAUTION** is used with the safety-alert symbol. They give the level of risk for potential injury.

! WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

! CAUTION indicates a potentially hazardous situation which, if not avoided may result in minor or moderate injury.

CAUTION used without the safety alert symbol indicates, a potentially hazardous situation which, if not avoided may result in property damage.

Read and follow all safety information and instructions.

TRIM LINE SCREEN ROOM INSTALLATION

APPLICATION:

The A&E Trim Line Screen Room is available in sizes to correspond with the various sizes of Trim Line Awnings.

TOOLS REQUIRED FOR INSTALLATION:

Pencil	1/8 Drill Bit
Measuring Tape	Center Punch
Phillips Screwdriver	Hammer/Mallet
Drill	(for Hook Stakes)

IMPORTANT: Read the entire installation procedure before starting the installation.

The Dometic Corporation reserves the right to modify appearances and specifications without notice.

INSTALLATION

During installation, care must be taken not to scrape and damage the panel and skirt.



1. In order to correctly match the Screen Room to the right size Trim Line Awning, you must know the **length of the awning**. See FIG. 1A.

The A&E Trim Line Screen Room consists of (1) continuous panel for the front, sides and rear skirt.


The above-mentioned panel and skirt are secured to the vehicle, the awning and to the ground by means of hook and loop fasteners, twist fasteners and hook stakes (provided). See FIG. 1C.

NOTE: The inner and outer sides of all panels can be checked by looking at the hook and loop fastener strips. The fastener strip on the front is on the outside.


2. Set up awning for installation of Trim Line Screen Room.
To facilitate accurate installation, vehicle should be parked on reasonably flat ground.

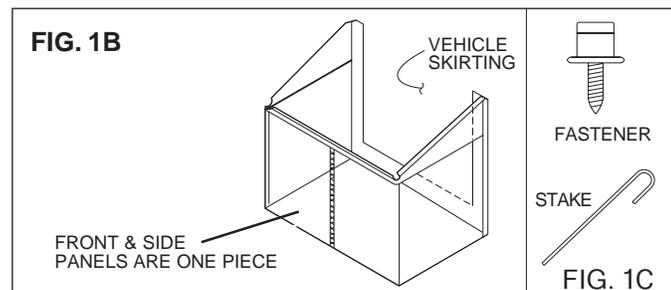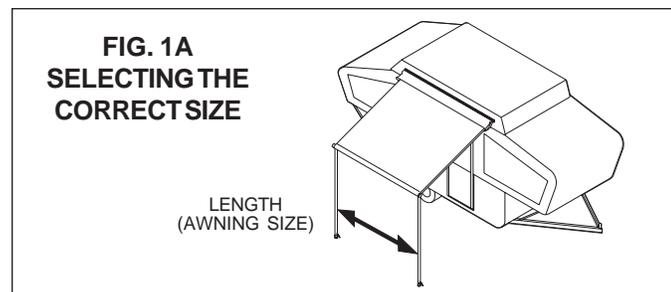

Open awning and install front support and side rafter pole as shown in FIG. 2

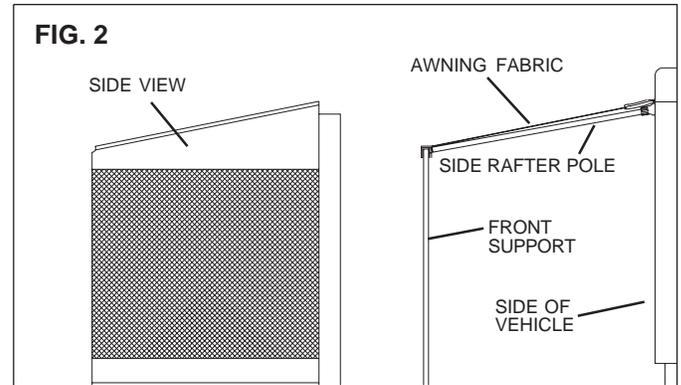


3. After awning is set up, remove screen room from storage bag and line up in position with awning as shown in FIG. 3.

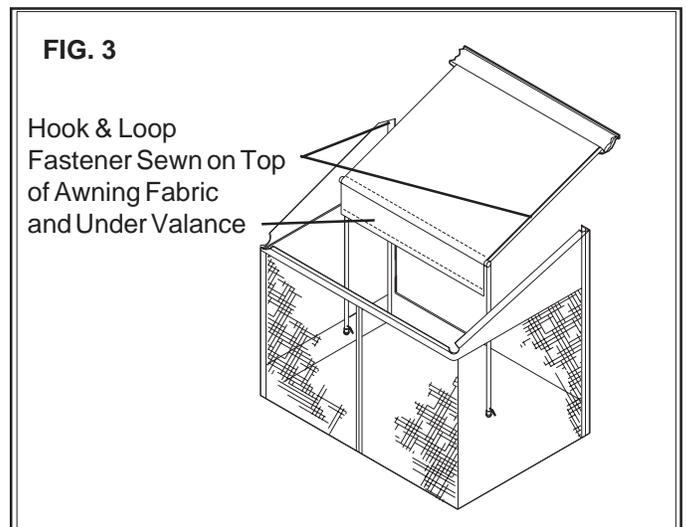


4. Fasten front of screen room to front by joining hook & loop fasteners together under valance. Pull side panels over rafters and join to fabric on top of awning on both sides.
5. When attaching screen room to awning at bag, pull bag away from awning and bunch bag so that screen room is securely attached to awning fabric inside of bag.


6. Flaps at rear of side panel on screen room are to fasten to tent canvas at lifter mechanism. Pull tent canvas flap away from hook & flap strips. Secure screen room flap to tent canvas using hook & loop fasteners sewn into both. Secure tent flap to screen room flap as shown in FIG. 4.

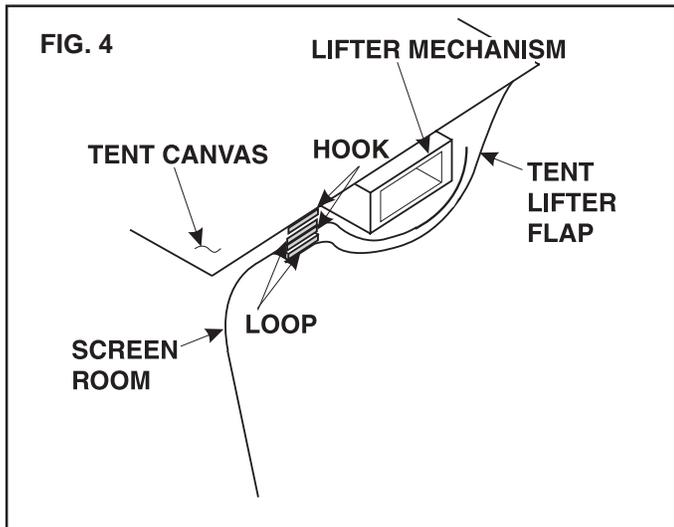

7. If camper does not have covers for lifter mechanism, fold screen room flap around lifter as shown in FIG. 5.

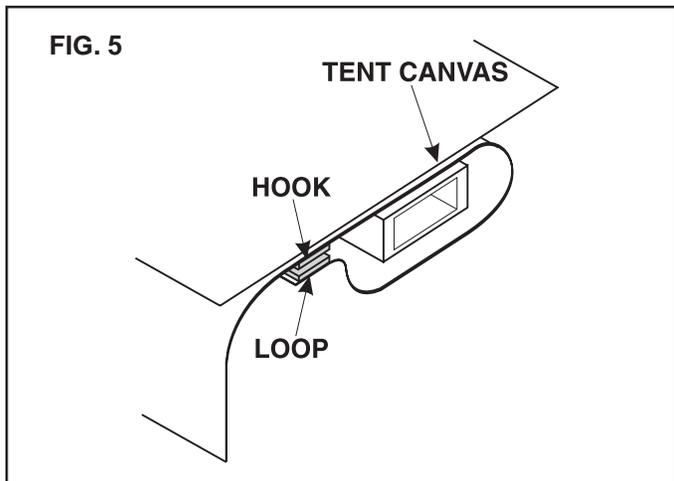


8. Align skirt at floor and wall of camper. Locate positions of twist fasteners and mark with pencil. Drill 1/8" holes and install twist fasteners.
 9. Attach skirt to camper using twist fasteners just installed. If needed, locate wheel skirt over wheel well and install using hook & loop fastener strips and twist fasteners.
 10. Secure bottom of panels by driving the hook stakes into the ground through the appropriate grommet. (See FIG. 6)
 11. Attach skirt to Screen Room with hook and loop fasteners sewn into room and skirt (see FIG. 6)

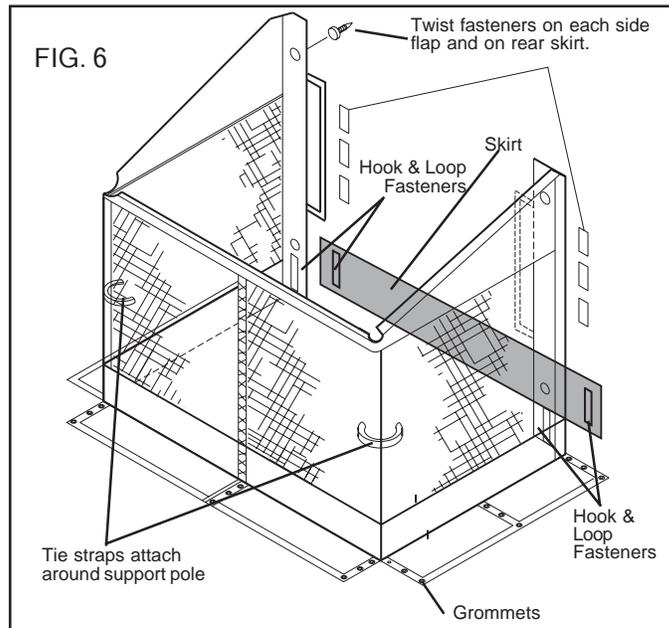

WHEEL COVER MOUNTING INSTRUCTIONS

1. Place the wheel cover in position to cover the wheel opening and mark the locations of the button sockets.
2. With a 1/8" drill bit, pilot drill a shallow hole at each marked location and install a twist fastener (provided in plastic bag).
3. Install the wheel cover by snapping onto the twist fasteners and turning fastener one quarter turn.
4. Take the 3 inch pieces of hook and loop strip; remove peel strip and stick them onto the screen room skirting opposite the hook and loop strips on the wheel cover (see FIG. 7).

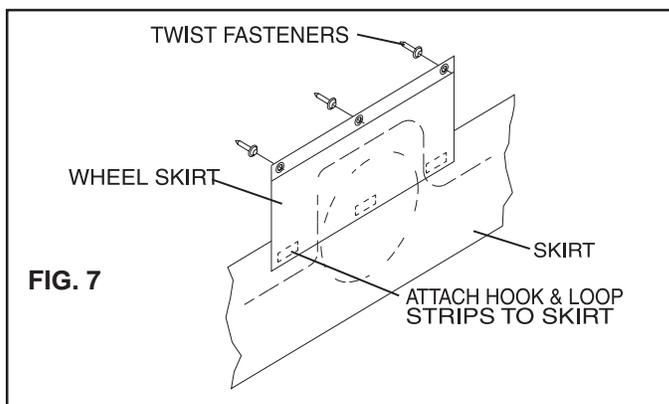

! WARNING

Do not operate appliances venting into this room enclosure with privacy panels closed. At least one panel must be open for ventilation when using appliances. Death or serious injury from Carbon Monoxide Poisoning could occur if not operated properly.