


Pump Noise Isolation Kit

Item Number 385319053

Important: Adding the Noise Isolation Kit will increase the overall height of the pump by 1 3/4-inches (44.5mm).

Installation tools required:

- 3/16-inch drill bit
 - Large slotted screwdriver
 - Large phillips head screwdriver
 - Hand or electric drill
 - 7/16-inch wrench
 - Pencil
1. Mount pump to noise isolation tubes using the four round head slotted machine screws, eight flat washers and four hex head nuts. Tighten securely.
 2. Set pump in position desired. Mark the four tube mounting holes with pencil. Remove pump and drill pilot holes with 3/16-inch (4.76mm) drill bit.
 3. Set pump in position aligning the four tube mounting holes. Insert the four sheet metal screws with flat washers and tighten securely.

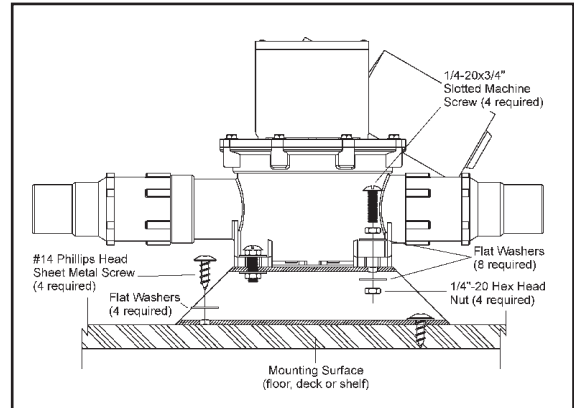

Dometic Corporation, Sanitation Division
13128 State Rt. 226, P.O. Box 38
Big Prairie, OH 44611 USA
1-800-321-9886 • Fax: 330-496-3097
www.Dometic.com

REVISION A

Form No. 600340682 9/17
©2017 Dometic Corporation


Pump Noise Isolation Kit

Item Number 385319053

Important: Adding the Noise Isolation Kit will increase the overall height of the pump by 1 3/4-inches (44.5mm).

Installation tools required:

- 3/16-inch drill bit
 - Large slotted screwdriver
 - Large phillips head screwdriver
 - Hand or electric drill
 - 7/16-inch wrench
 - Pencil
1. Mount pump to noise isolation tubes using the four round head slotted machine screws, eight flat washers and four hex head nuts. Tighten securely.
 2. Set pump in position desired. Mark the four tube mounting holes with pencil. Remove pump and drill pilot holes with 3/16-inch (4.76mm) drill bit.
 3. Set pump in position aligning the four tube mounting holes. Insert the four sheet metal screws with flat washers and tighten securely.

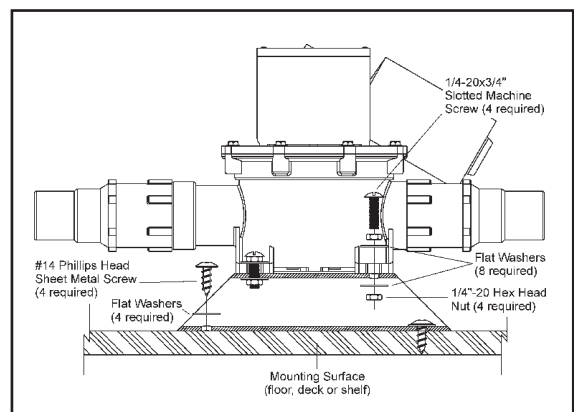

Dometic Corporation, Sanitation Division
13128 State Rt. 226, P.O. Box 38
Big Prairie, OH 44611 USA
1-800-321-9886 • Fax: 330-496-3097
www.Dometic.com

REVISION A

Form No. 600340682 9/17
©2017 Dometic Corporation