



## VacuFlush® 146 Toilet Base Assembly


**Model 146 VacuFlush requires additional assembly of discharge fitting to base of toilet before installing to floor and plumbing system.**

1. Turn toilet upside, placing seat on surface that will not damage the finish.
2. Apply silicone grease to all surfaces of square-cut seal.
3. Place seal in groove on underside of base.
4. Align holes of discharge fitting with holes on base. Place fitting on seal and base.
5. Assemble fitting to base with five fasteners (provided).




**Note**

Discharge fitting is ABS material. Can be used with optional elbow (385310580).

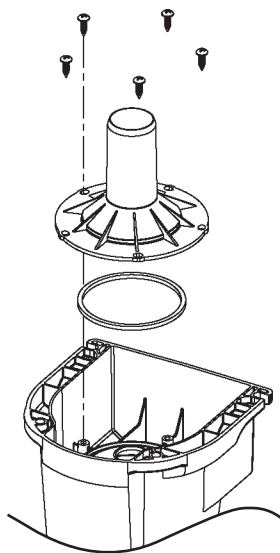

**Follow rough-in dimensions below to locate toilet discharge opening in floor.**

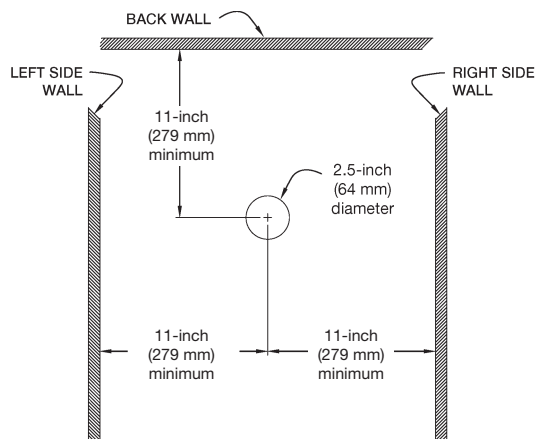

**Dometic Corporation, Sanitation Division**  
13128 State Rt. 226, P.O. Box 38  
Big Prairie, OH 44611 USA  
1-800-321-9886 • Fax: 330-496-3097  
www.Dometic.com

**REVISION A**  
Form No. 600346381 8/17  
©2017 Dometic Corporation



## VacuFlush® 146 Toilet Base Assembly


**Model 146 VacuFlush requires additional assembly of discharge fitting to base of toilet before installing to floor and plumbing system.**

1. Turn toilet upside, placing seat on surface that will not damage the finish.
2. Apply silicone grease to all surfaces of square-cut seal.
3. Place seal in groove on underside of base.
4. Align holes of discharge fitting with holes on base. Place fitting on seal and base.
5. Assemble fitting to base with five fasteners (provided).




**Note**

Discharge fitting is ABS material. Can be used with optional elbow (385310580).

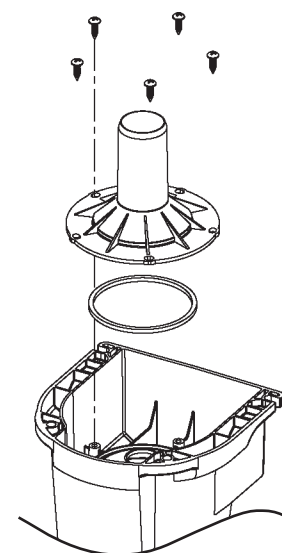

**Follow rough-in dimensions below to locate toilet discharge opening in floor.**

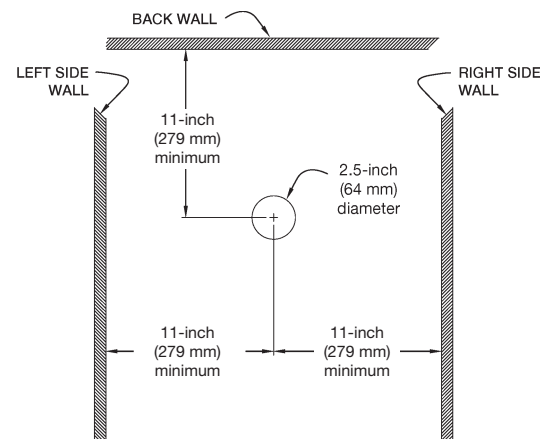

**Dometic Corporation, Sanitation Division**  
13128 State Rt. 226, P.O. Box 38  
Big Prairie, OH 44611 USA  
1-800-321-9886 • Fax: 330-496-3097  
www.Dometic.com

**REVISION A**  
Form No. 600346381 8/17  
©2017 Dometic Corporation