
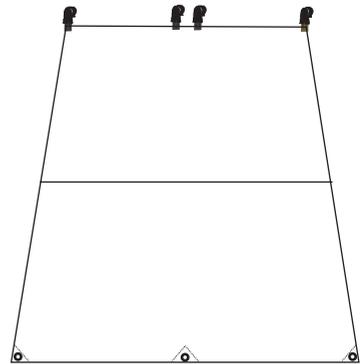
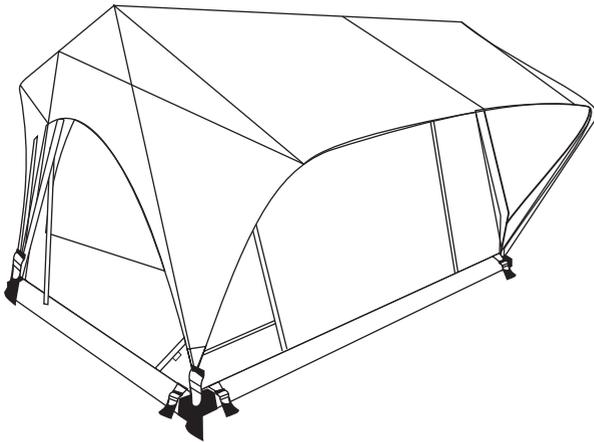


↗ DOMETIC Awnings Tents Rooftop

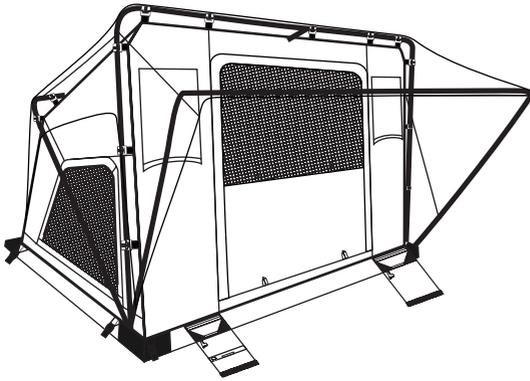

TRT140M, TRT120E, TCA100, TMA100

EN

Dometic Rooftop Tents and Awnings
Operating Manual

Safety	4
Scope of delivery	4
Important information	5
Product Overview	5
TRT140M	5
TRT120E.....	5
Intended use	5
Installing the roof tent	6
Installation material	8
Setting up the roof tent	9
Important information	11
Installation material	12
Operation	13
Main technology and functions	13
Technical performance and characteristics of the motor	14
Tips and tricks	14
Important information	14
Maintenance	14
Tool bag.....	16
Ladder	16
Power cable.....	16
Disassembly of the rooftop tent.....	17
Technical data	17
TCA100.....	18
TMA100	18
Set up	19
Disassembly	20
Storage	21
Disposal	22
Copyright.....	22

Safety

- **Before installing your roof tent check your vehicle and roof rack manufacturer's instructions to ensure sufficient load capacity including both the tent and intended occupants.**
- We recommend that you DO NOT transport your roof tent over 110 km/h and always keep to the speed limits.
- At the beginning of each trip and at regular intervals during each trip, check that your roof tent is firmly attached by checking all bolts and that all soft belts are safely secured. Always check your roof tent is in a safe and appropriate place.
- DO NOT use your roof tent if any part or any of its components is visibly damaged, particularly the soft straps and buckles. In such situations, please contact us for assistance.
- Please note that unsecured loads and incorrectly mounted roof racks can be lost during the journey. This can lead to serious accidents.
- Be sure to adjust your driving behaviour (e.g. crosswind sensitivity, cornering, and braking behaviour) to accommodate the change in vehicle height.
- The vehicle and roof rack manuals must always be kept with you.
- Do not use cleaning fluids containing bleach, alcohol or ammonia.
- TRT120E power cable should not be connected to power source if your vehicle is in motion. Only operate tent setup and closure when the vehicle is parked and stationary.

Please note the following points when using your roof tent:

- The height of your vehicle can increase by up to 90 cm (depending on your roof racks).
- Beware of low entrances, low hanging branches, etc.
- Wind noise may occur when driving with a roof tent.
- When using an automatic car wash, your roof tent must be removed first.
- In addition to these instructions for use, you should also follow the installation instructions for your roof rack and the operating instructions for your vehicle.
- For reasons of fuel economy and the safety of other road users, your roof tent and roof rack should be removed when not in use.
- For your safety, you should only use tested (e.g. GS-tested) roof racks that are approved for use in conjunction with your vehicle.
- To avoid creating excessive lifting force, your roof tent should be mounted parallel to the road line and not at an angle.
- When climbing in and out of your roof tent, always use the ladder with caution and never let children use it unsupervised. Make sure the ladder hooks are in good condition. Contact us if you need replacements.
- Do not allow open flames in or near your roof tent.

Scope of delivery

Please check the contents for completeness using the delivery document.

1x Pre-assembled roof tent

1x Set mounting material

1x Instruction manual

Please make sure to use a suitable roof rack before mounting.

Important information

The manufacturer is not liable for damage or accidents resulting from non-observance of these operating instructions, changes to parts, or the use of parts other than the manufacturer's original parts.

The warnings, cautions and instructions in this document cannot cover every imaginable situation, so it is the user's responsibility to exercise common sense and caution.

It is your responsibility to pass these instructions on to third parties using this roof tent, including second-hand sales.

Product Overview

TRT140M

The TRT140M includes a 5 cm, high-density foam mattress that's big enough to comfortably sleep two people. Built for the outdoors, the TRT140M features a two-layer fabric construction, suitable for even the most remote destinations in the middle of winter. The TRT140M's robust design is further enhanced by a durable water-resistant PVC tent cover, with a UPF 50+ protection rating and can handle just about anything that is thrown at it. Thanks to the integrated fly screens, you can get plenty of airflow through the tent while keeping insects out. Despite the robust construction of the TRT140M, it uses lightweight aluminium alloy for the frame.


TRT120E

The TRT120E includes a 5 cm, high-density foam mattress that's big enough to comfortably sleep two people. Built for the outdoors, the TRT120E features a two-layer construction, suitable for even the most remote destinations in the middle of winter. The TRT120E's robust design is further enhanced by a durable water-resistant PVC tent cover, with a UPF 50+ protection rating and can handle just about anything that is thrown at it. Thanks to the double-layered windows with integrated fly screens, you can get plenty of airflow through the tent while keeping insects out. Despite the robust construction of the TRT120E, it uses lightweight aluminium alloy for the frame. Setting up the TRT120E is simple with a 12 V operation and wireless remote control that assembles the tent in a matter of minutes.

Intended use

The roof tents are intended for use on passenger cars. Assembly may only be carried out after reading these instructions.

Installing the roof tent

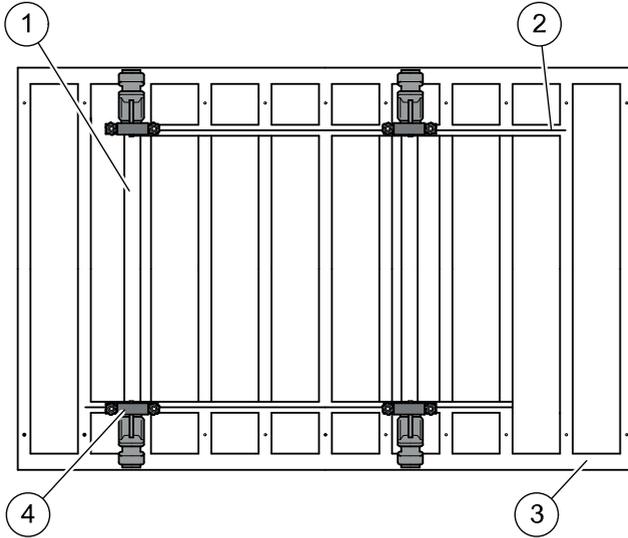

(1) Rack

(2) Rail

(3) Base frame

(4) U-shape bracket


1. You must have roof racks correctly fitted to your vehicle before installing the roof tent.




2. Ensure when placing the rooftop tent on your car roof that you share the load across both racks.




3. Adjust the tent to the roof's centre, ensuring the rear door can be opened/closed.
4. Slide the M8X50 hexagon bolt into the rails from both sides, ensuring you have positioned 8 in total (see Picture 1). Replace the plastic covers of your roof racks (see Picture 2).
5. Use the plastic nut, flat, and split washer to fix the M8X50 hexagon bolt and U-shaped bracket in place to all 4 corners (see Picture 3).

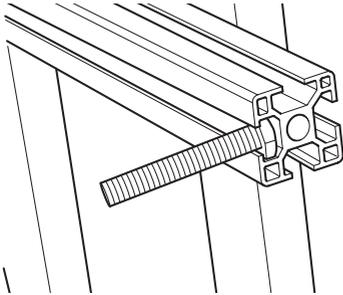


Picture 1

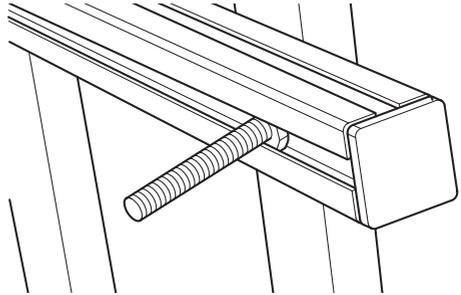

Picture 2

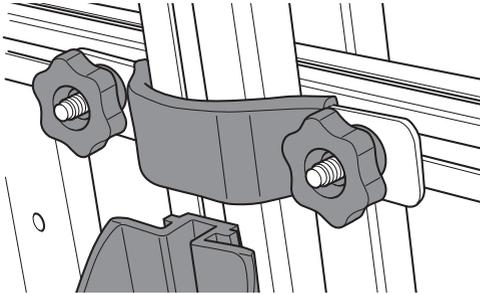


Picture 3

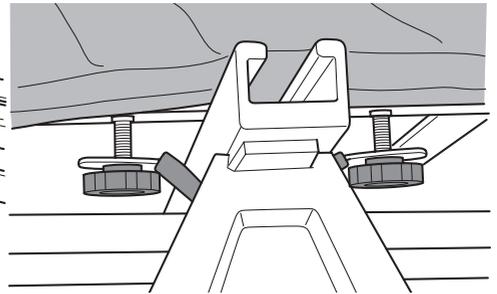


Picture 4

TRT140M


Installation material

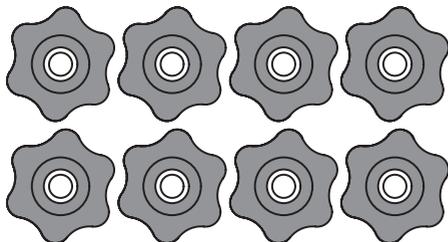


Plastic nuts

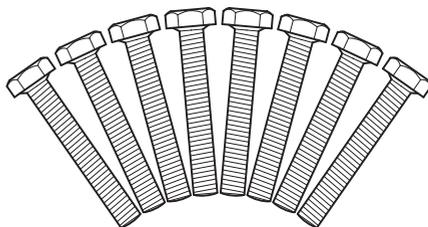


M8X50 Hexagon bolt

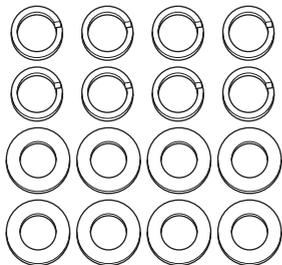

M8 flat washer / M8 split washer

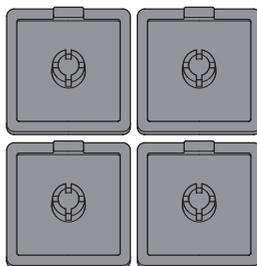


Rail cap

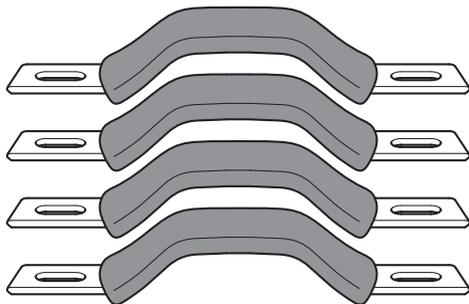

U-shape bracket


Setting up the roof tent

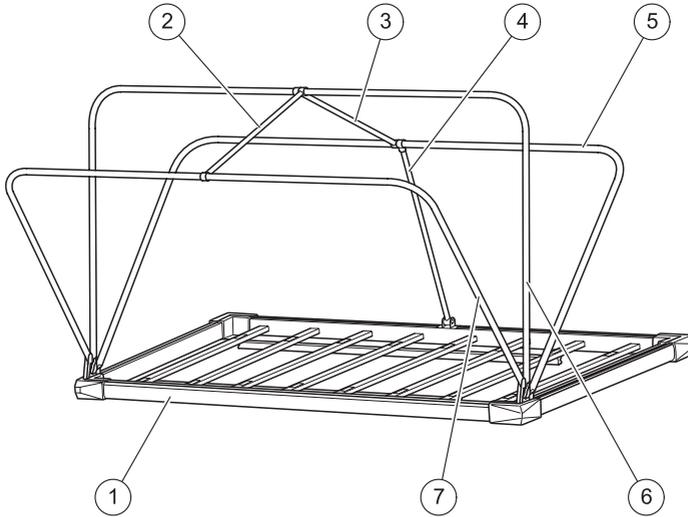


- (1) Base (2) Stretcher pole (3) Stretcher pole (4) Stretcher pole
(5) U-shaped pole (6) U-shaped pole (7) U-shaped pole




1. Remove the tent's PVC cover.

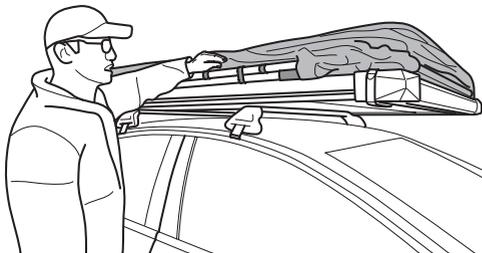

2. Find stretcher pole (3).

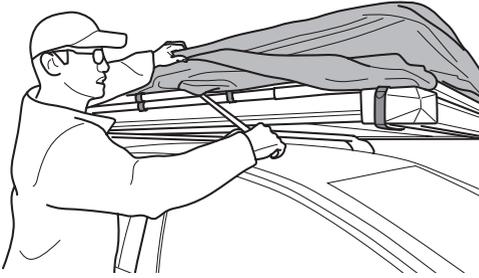

3. Lift stretcher pole (3).

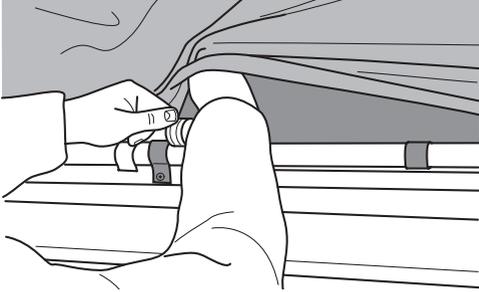


4. Connect stretcher pole (3) with u-shaped pole (5).




5. Find stretcher pole (4).




6. Lift stretcher pole (4).

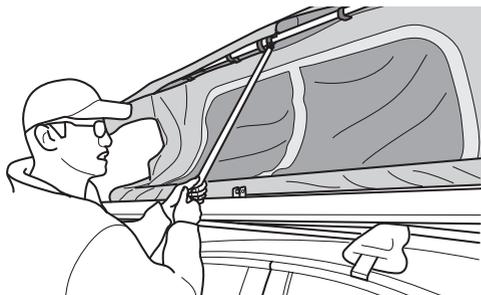


7. Connect stretcher pole (4) with the base.

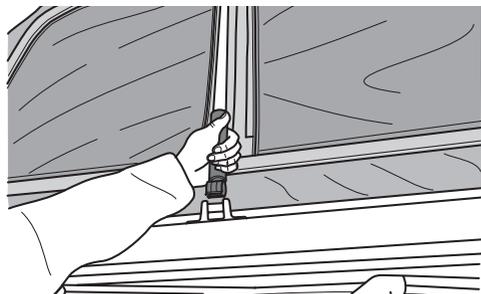

8. Fully erect the tent by pulling open the frame opening from the passenger side.

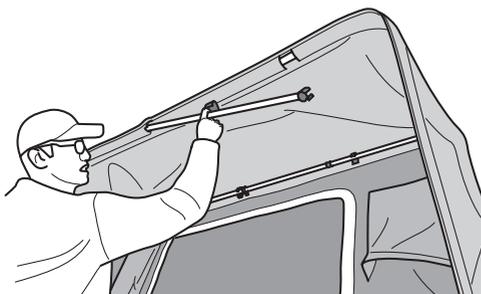

9. Take out stretcher pole (2), which is located in front of the u-shaped pole (6).

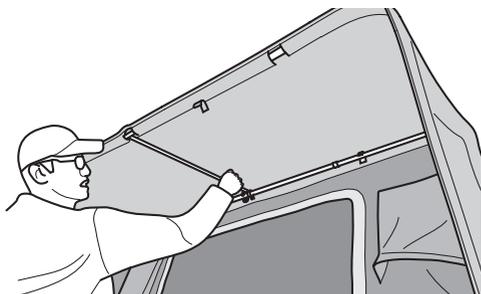

10. Connect it with u-shaped pole (6). The tent is set up and ready now.


11. Reverse operation to fold down the tent.

Important information


If your roof tent will not open, check the following:

- Check the stretcher poles are stuck by fabric or not.
- Check the joints or connect parts are damaged or not, if yes, replace it damaged part.


Installation material

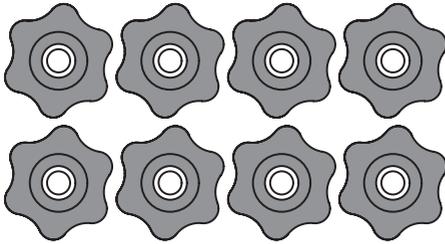


Plastic nuts

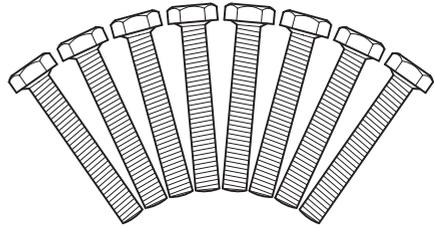


M8X50 Hexagon bolt

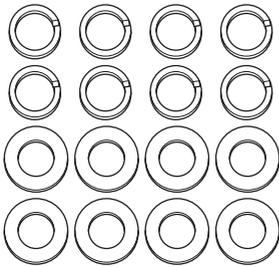


M8 flat washer / M8 split washer

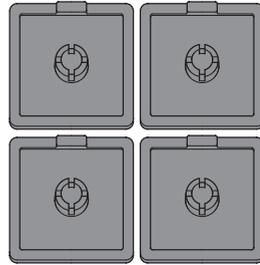

Rail cap

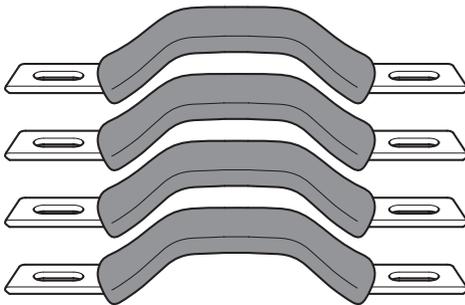


U-shape bracket

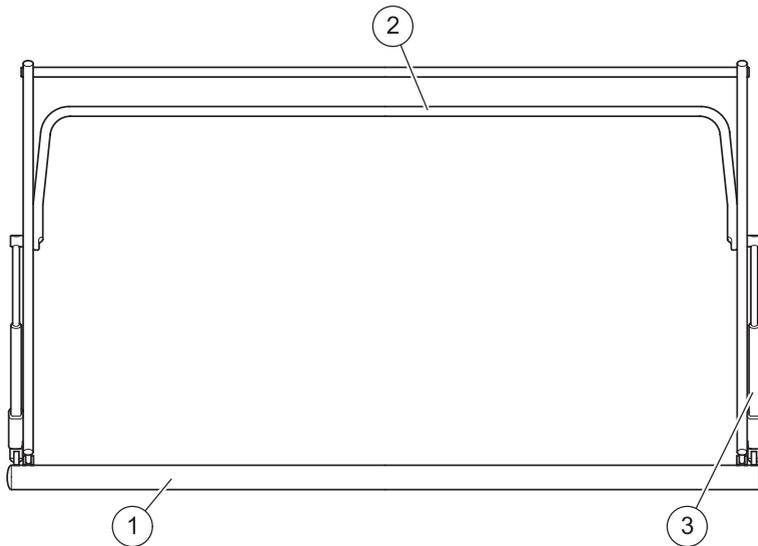

(1) Base frame

(2) Pole support system

(3) Motorized pushing rod

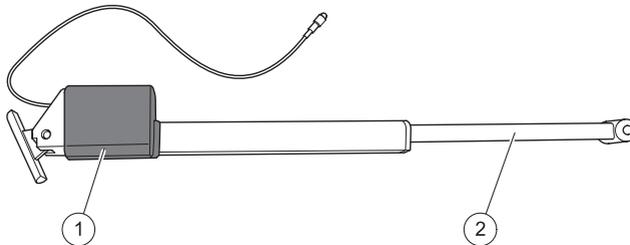

(1) Motor

(2) Push rod

Operation

1. Remove the tent cover.
2. Insert power cable into cigarette lighter.
3. Make sure power is available. Press "STOP" first, then press "UP" button to set up the tent.
4. Make sure no other objects are in the tent. Press the "DOWN" button to fold down the tent.
5. Press the "STOP" button to stop.
6. Make sure the tent is folded completely. Then attach the cover.

Main technology and functions

- Erection and dismantling of the tent by motorised push rod.
- Wireless remote control.
- The motor is switched off when the pushrod is fully opened or fully closed.

Technical performance and characteristics of the motor

- Rated voltage: 12 VDC Power: 20 W
- Minimum 10 A socket rating
- Wireless remote control
- The erection and dismantling of the tent takes about 50 seconds.
- Motors equipped with overheat protection.

Tips and tricks

- Always ensure the tent is dry before packing away.
- Keep the rail of base clean.
- Ensure ladder is always locked into place and angled away from vehicle.
- Pack the tent down well when driving.

Important information

If your roof tent will not open using the push rods, replace the motor push rods with the supplied two spare poles:



1. Use the screw driver and wrench provided in the tool bag to remove motor push rods from both sides.
2. Take the two 92 cm spare poles from the pocket at the bottom side of the tent.
3. Insert the spare poles instead of the motor push rods.

Maintenance


- Care for seams and zippers with suitable care products.
- Always ensure good ventilation to avoid moisture.
- Use only lukewarm water and a soft brush for cleaning.
- Avoid chemicals, soap and detergents.
- When folding down and covering the tent, make sure the tent is dry.
- If the aluminum frame contains water, erect it to pour out the water.
- Keep the push rod of the motorize pushing rod clean by wiping it with a clean dry cloth.

Notice

- Keep the side window open, when you set up or fold down the tent.
- Make sure there is no other objects inside the tent, when you set up or fold down the tent, such as a sleeping bag, pillow etc.
- Do not push down on the tent frame when the tent is folded down, as this could cause damage to the tent structure.
- When installing the tent onto the roof of the vehicle. Inspect that all bolts are sufficiently secure.
- Make sure the tent is folded down and covered, when you drive.
- Do not disassemble attempt repair of the electric motor or push rod.
- Do not fold down during storms or heavy rain.
- Keep the remote control dry.
- Do not pitch the tent if it is very windy or stormy.
- If you notice any noise when erecting or folding down the tent, inspect the pole and joints immediately.


Tools

Tool bag

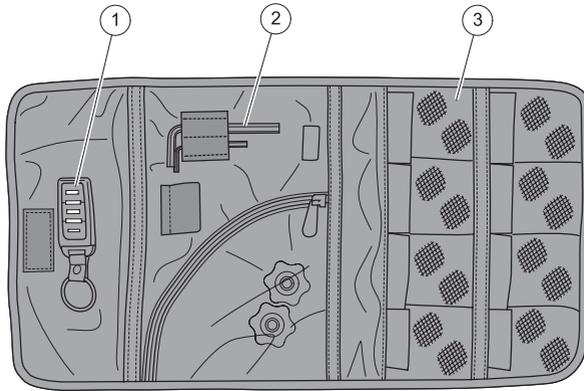


- (1) Remote control (2) Two L-shaped hexagonal wrenches (3) Screws and washers

Ladder

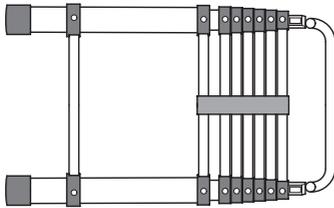


Fit the ladder to the tent frame.

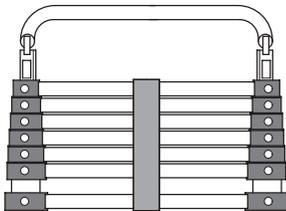

Use the strap to tie down ladder for storage.

Power cable

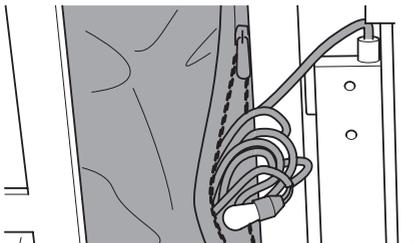

The power cable can be placed in the pocket beside the door for storage.

Disassembly of the rooftop tent

1. Remove all objects from the roof tent (sleeping bag, pillow, etc.).
2. Loosen the stretcher poles.
3. Open the side windows.
4. Fold up the roof tent. Press the tent walls inwards carefully.
5. Attach the tent cover.

Technical data


TRT140M	
Fly	210 Drip-stop polyoxford PU 3000 mm with silver coating UPF 50+
Inner tent	190 g Drip-stop polycotton PU 2000 mm
Frame	aluminium alloy
Floor	210 g polycotton PU 2000 mm
Tent cover	600 g/m ² Heavy PVC
Mattress	5 cm high density foam mattress
Ladder	Telescopic aluminium ladder
Remote	433 Mhz wireless remote control
Size	Inner tent size: 200 (L) x 140 (W) x 75 / 120 (H) cm
	Outer tent size: 217 (L) x 154 (W) x 95 / 135 (H) cm
	Packing size: 229 x 32 x 166 cm
	N.W. : 51 kg (including ladder)
	G.W. : 74 kg

TRT120E	
Fly	210 g Drip-stop polyoxford PU 3000 mm with silver coating UPF 50+
Inner tent	190 g Drip-stop polycotton PU 2000 mm
Frame	aluminium alloy
Floor	210 g polycotton PU 2000 mm
Tent cover	600 g/m ² PVC UPF 50+
Mattress	5 cm high density foam mattress
Ladder	Telescopic aluminium ladder
Remote	433 Mhz wireless remote control
Size	Inner tent size: 200 (L) x 120 (W) x 100 (H) cm
	Outer tent size: 218 (L) x 132 (W) x 115 (H) cm
	Packing size: 229 x 32 x 144 cm
	N.W. : 53 kg (including ladder)
	G.W. : 71 kg

Awnings

Select the orientation of the vehicle so that the entrance of the roof tent and the assembly of the awning are positioned from the side facing away from the wind.

TCA100

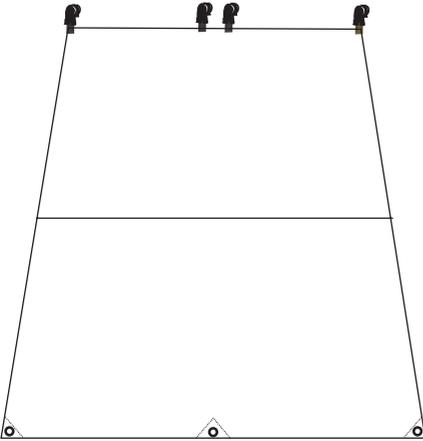

The awning is attached to the poles of the roof tent with loops. After the awning has been fastened and aligned, it is secured to the ground with pegs.

TMA100




The awning is attached to the poles of the roof tent with clips. After the awning has been fastened and aligned, it is secured to the ground with pegs.


Observe the following assembly instructions.

Set up


1. Take the awning out of the carry bag.

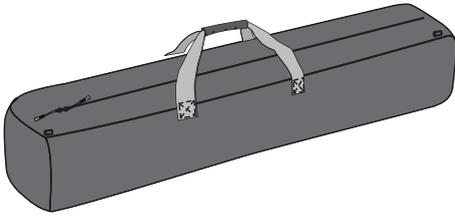


2. Clip the awning onto the pole of the roof tent from the middle to the two sides.
 - Adjust the length of the adjustable buckles.

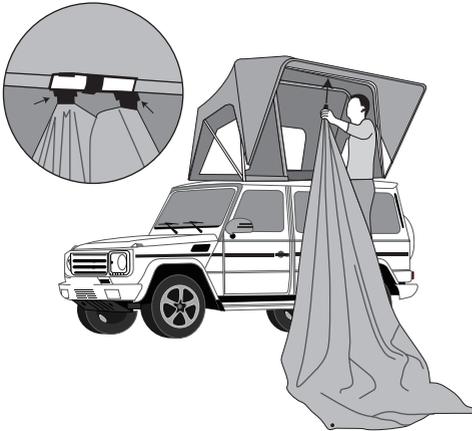

3. Clip the awning onto the u-shaped pole on the front.
 - Adjust the length of the adjustable buckles.

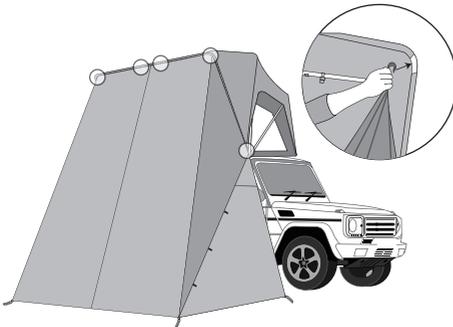

4. Use pegs to tie down awning.

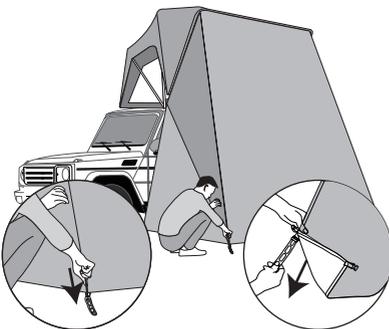




5. The awning can be rolled up from the middle and two sides, and clipped onto the roof.



6. Put the guy-line on.
7. Set up the awning as a canopy.

Disassembly

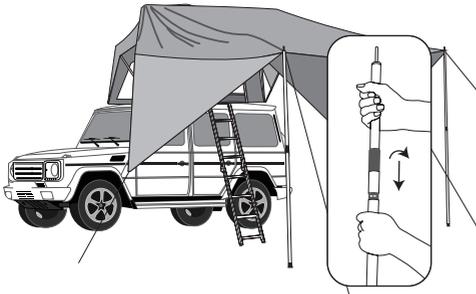


1. Take down the poles and the guy-line.




2. Unclip the awning.

3. Make sure all accessories are together.

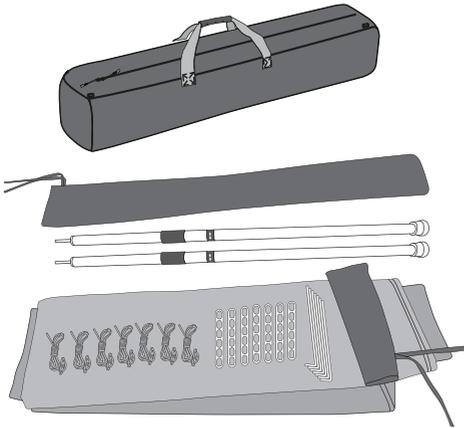

4. Place the awning and accessories into the carry bag.

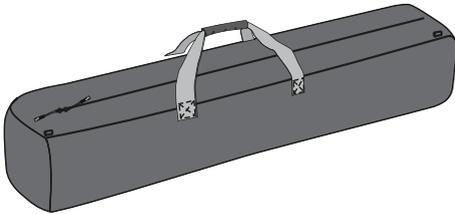

Storage

Do not store the tent and awning damp or wet.
Store the tent and awning in a dry place when not in use.

Warranty

If the product does not work as it should, please contact your retailer or the manufacturer's branch in your country (see dometic.com/dealer). The warranty applicable to your product is 1 year.

For repair and warranty processing, please include the following documents when you send in the device:

- A copy of the receipt with purchasing date
- A reason for the claim or description of the fault

Australia only

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

New Zealand only

This warranty policy is subject to the conditions and guarantees which are mandatory as implied by the consumer guarantees act 1993 (NZ).

Disposal

Local regulations must be observed when disposing of a roof tent or awning. Information on recycling or disposal can be obtained from the relevant environmental authorities.

Copyright

© 2020 Dometic Group. The visual appearance of the contents of this manual is protected by copyright and design law. The underlying technical design and the products contained herein may be protected by design, patent or be patent pending.

The trademarks mentioned in this manual belong to Dometic Sweden AB.

All rights are reserved.

Mobile living made easy.



dometic.com

**YOUR LOCAL
DEALER**

dometic.com/dealer

**YOUR LOCAL
SUPPORT**

dometic.com/contact

**YOUR LOCAL
SALES OFFICE**

dometic.com/sales-offices

A complete list of Dometic companies, which comprise the Dometic Group, can be found in the public filings of:
DOMETIC GROUP AB Hemvärnsgatan 15 SE-17154 Solna Sweden

4445103030 08/2020